

Installation manual | Model: MITSUBISHI ASX | Skid plate for: engine bay and MT case

# plate should not interfere with any vehicle's units and components.

INSTALLATION MANUAL:

Disassemble the skid plate to component parts.
 Fix corbels "1" to the vehicle's towing lugs.
 Mount threaded inserts with bolts "2" into the front axie beam's apertures.

4 Install the rear part of the skid plate on the mounted bolts

#### 5 Fix the front part of the skid plate to the mounted corbels 6 Tighten all screw joints.

# OPERATING CONDITIONS:

Engine bay and transmission elements skid plate has been designed to operate in conditions specified by vehicle's producer. Cases of crush or driving into obstacles at a speed should be excluded during exploitation. In case of head-orcrush it is necessary to assure in absence of damages of vehicle's components and units and availability of condworthiness on certified service stations.

mounted according to the producer's installation instruction by a dedicated dealer or on certified service stations. The skid

### WARRANTY:

Warranty period - 1 year.

#### WARRANTY TERMS:

The skid plate should be installed on a vehicle with undamaged body and load-bearing elements (vehicle, which hads never been involved in road traffic accident);

There are no mechanical diamages of the skid plate resulting from head-on crush. All requirements to skid plate

installation should be satisfied;
There are no mechanical damages of powder coating.
Producer does not have liability for damages raused to the vehicle, health and life of neonle in case of installation an

Producer does not bear liability for damages caused to the vehicle, health and life of people in case of installation and exploitation terms violation. Producer has a right to introduce changes into the skid plate construction.



The Quality Management System of LLC Metalloproduktsia has been audited by Bureau Veritas Certification and conforms to requirements of the ISO 9001:2008 standard.



Article: 14.2126



NO.	NAME	QTY.	NO.	NAME	QTY.
1	Corbels	2	5	Bolt M 10x30	6
2	Threaded insert	2	6		
3	Washer 10	6	7		
4	Special washer	2	8		

Thread	M6x1.0	M8x1.25	M10x1.5	M12x1.75
Tightening torque	9.8 Hm	24.0 HM	47.0 Hm	81.0 Нм