

INSTALLATION MANUAL:

- plate should not interfere with any vehicle's units and components. Unscrew nuts of the trailing arm's fastening to the front axle.
- 2. Install brackets "1" under these nuts and tighten nuts.
- 3. Fix the skid plate to the mounted brackets. 4. Tighten all screw joints.

OPERATING CONDITIONS:

Engine bay and transmission elements skid plate has been designed to operate in conditions specified by vehicle's producer. Cases of crush or driving into obstacles, at a speed should be excluded during exploitation. In case of head-on crush it is necessary to assure in absence of damages of vehicle's components and units and availability of madworthiness on certified service stations

plate is fixed to regular apertures located on vehicle's body load-bearing elements. In case of correct installation the skid

WARRANTY:

Warranty period - 1 year.

WARRANTY TERMS:


The skid plate should be installed on a vehicle with undamaged body and load-bearing elements (vehicle, which hads never been involved in road traffic accident): There are no mechanical damages of the skid plate resulting from head-on crush. All requirements to skid plate

installation should be satisfied: There are no mechanical damages of powder coating.

Producer does not bear liability for damages caused to the vehicle, health and life of people in case of installation and exploitation terms violation. Producer has a right to introduce changes into the skid plate construction.



The Quality Management System of LLC Metalloproduktsia has been audited by Bureau Veritas Certification and conforms to requirements of the ISO 9001:2008 standard.

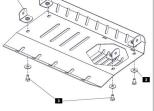



LIST OF DADTS

NO.	NAME	QTY.	
1	Corbel	4	
2	Bolt M 10x20	4	
3	Washer 10	4	
4			

Thread	M6x1.0	M8x1.25	M10x1.5	M12x1.75
Tightening torque	9.8 Nm	24.0 Nm	47.0 Nm	81.0 Nm