

Installation instructions for

24.2793 24.2794

 
 
Under Run Protective Shield Fuel Tank

TOYOTA RAV4




LEXUS NX

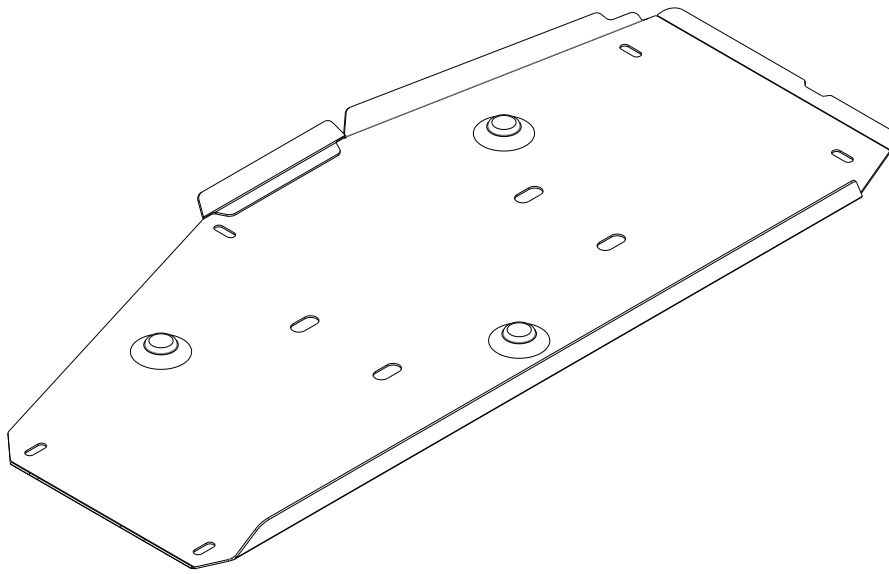


A**B**

 
1x

C

 
1x

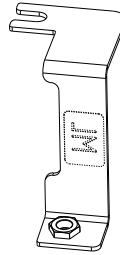D

 
1x

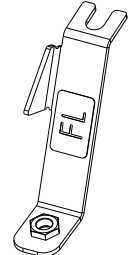E

 1x

F

 1x

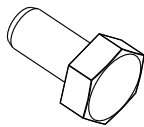G

 
M10x30

5x

H


d=10

5x

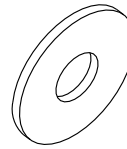I


d=10

 5x

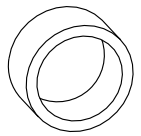
J

h=10

 
1x

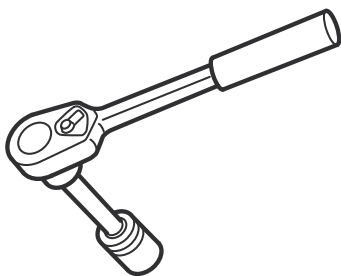



17 mm

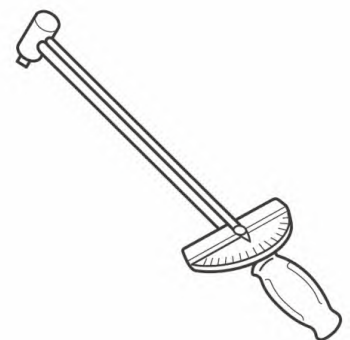 

1

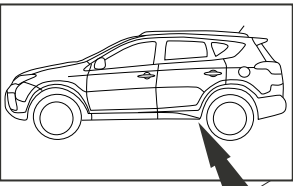 


FWD

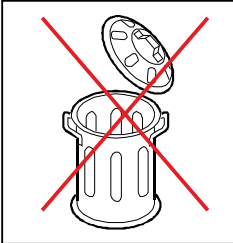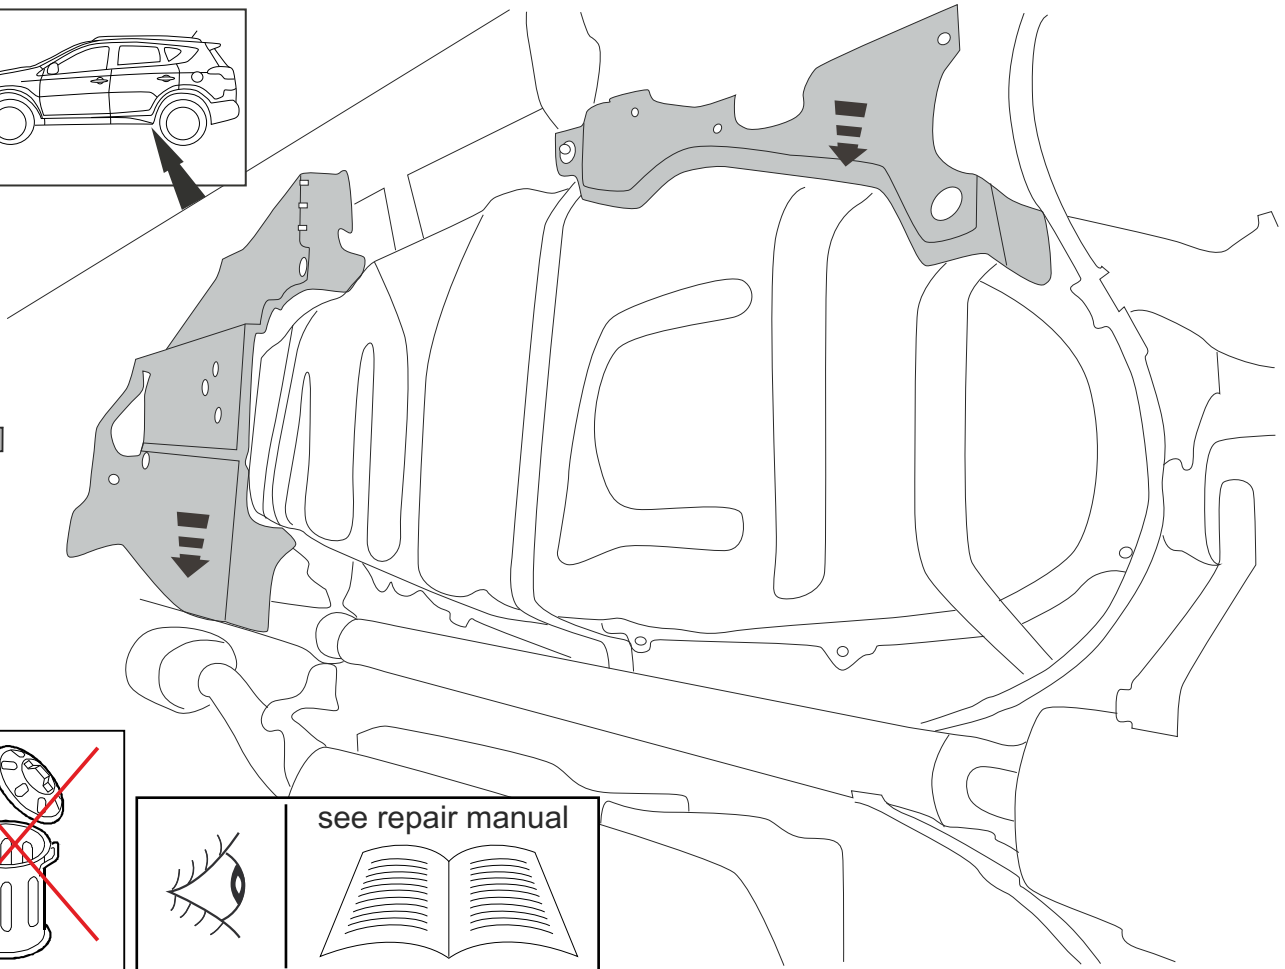  


	see repair manual



 
2

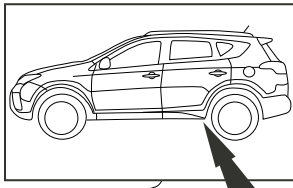

FWD

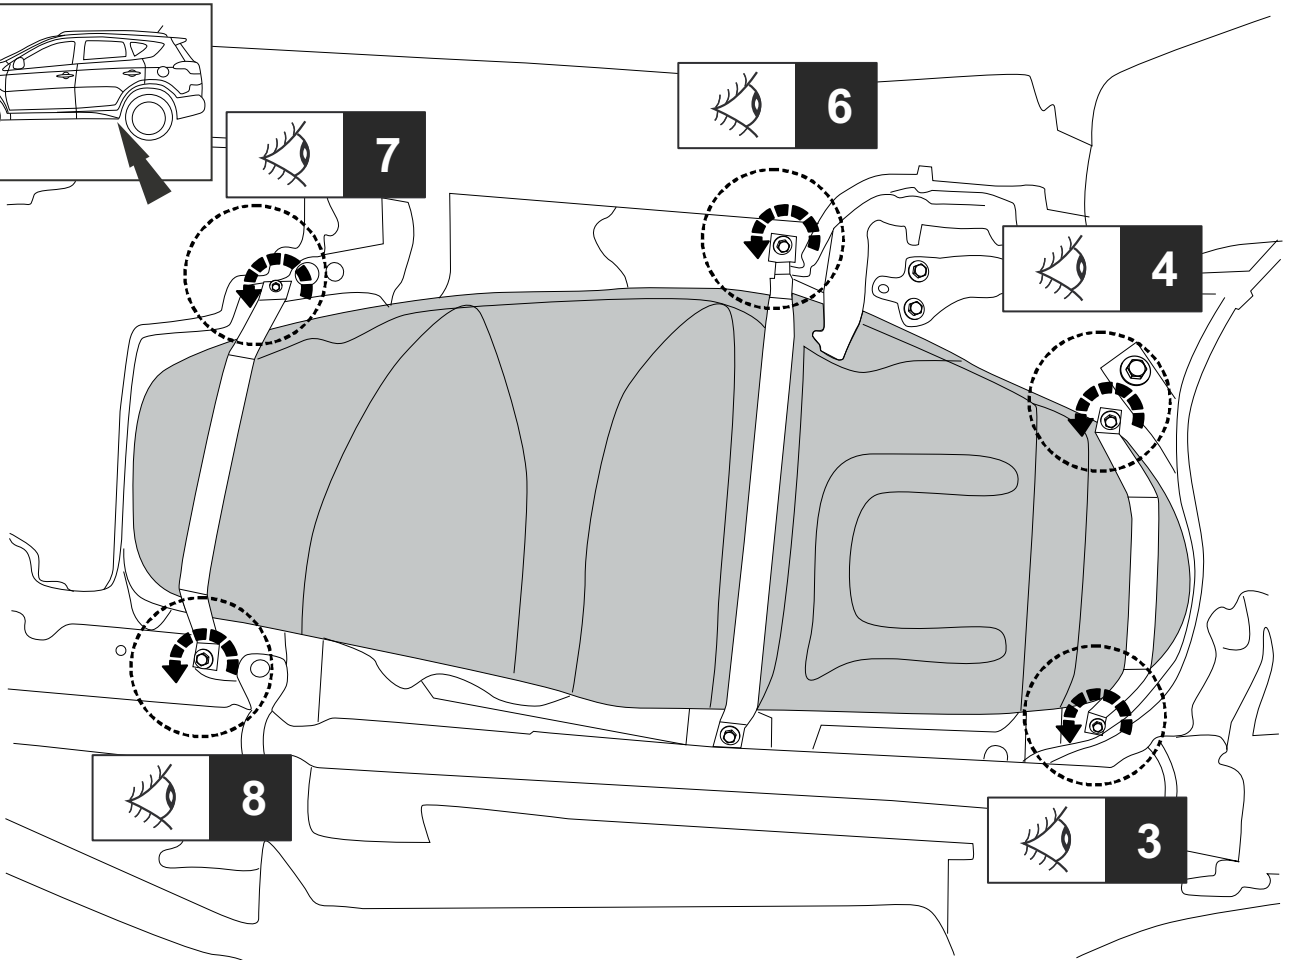 

3

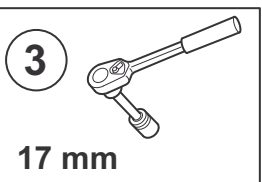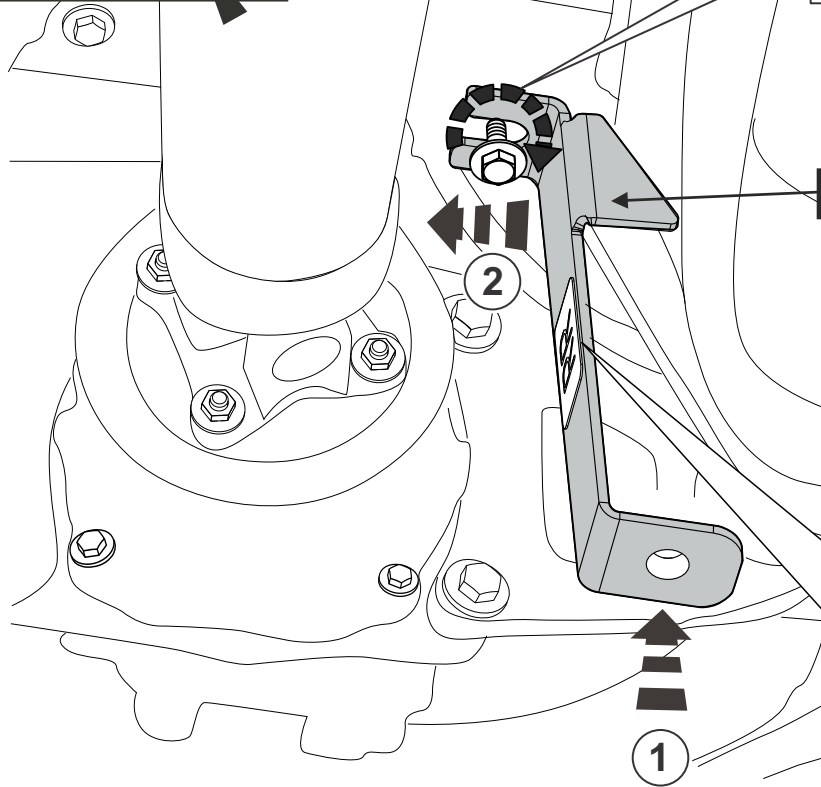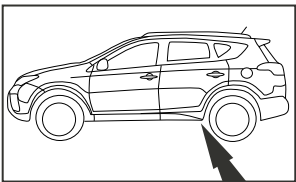   

17 mm

 
 
 
4



45 Nm



4

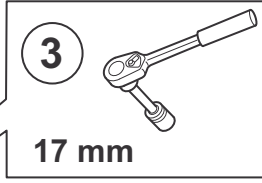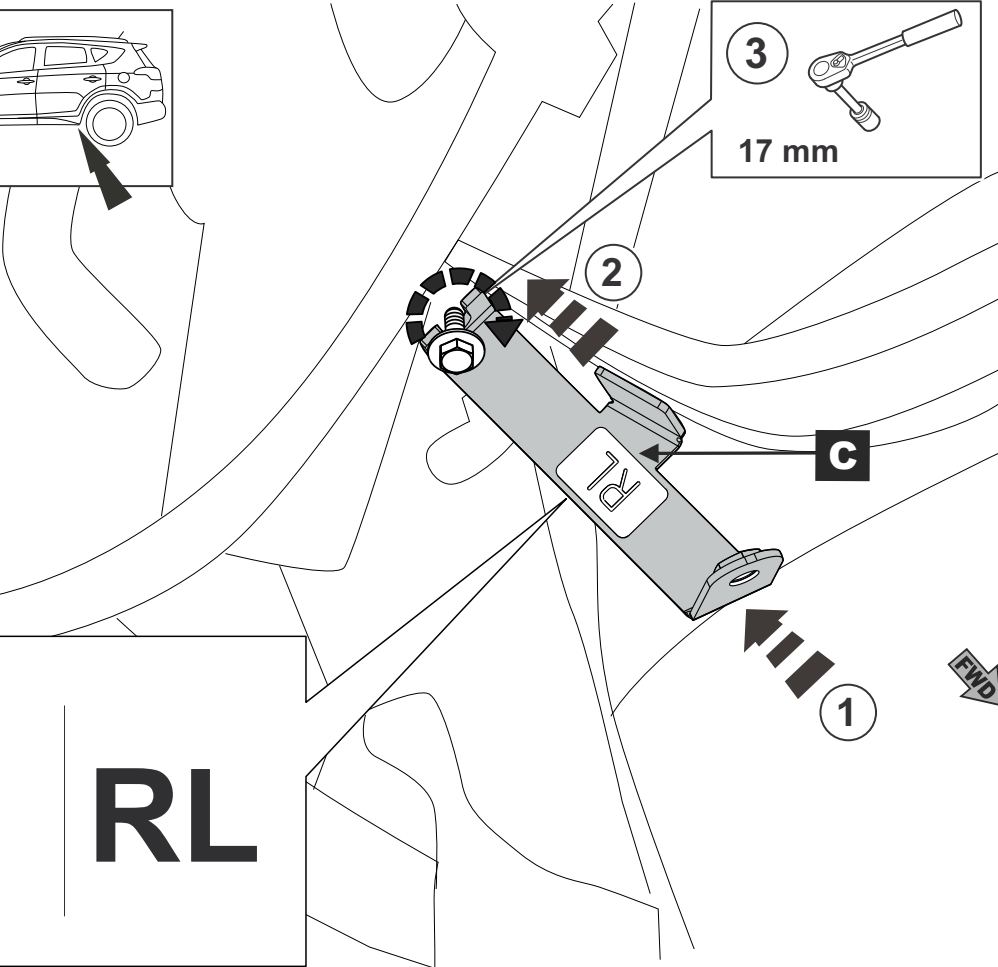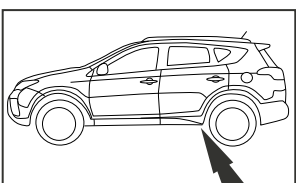

17 mm

 
4




45 Nm




5

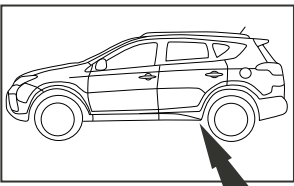



FWD

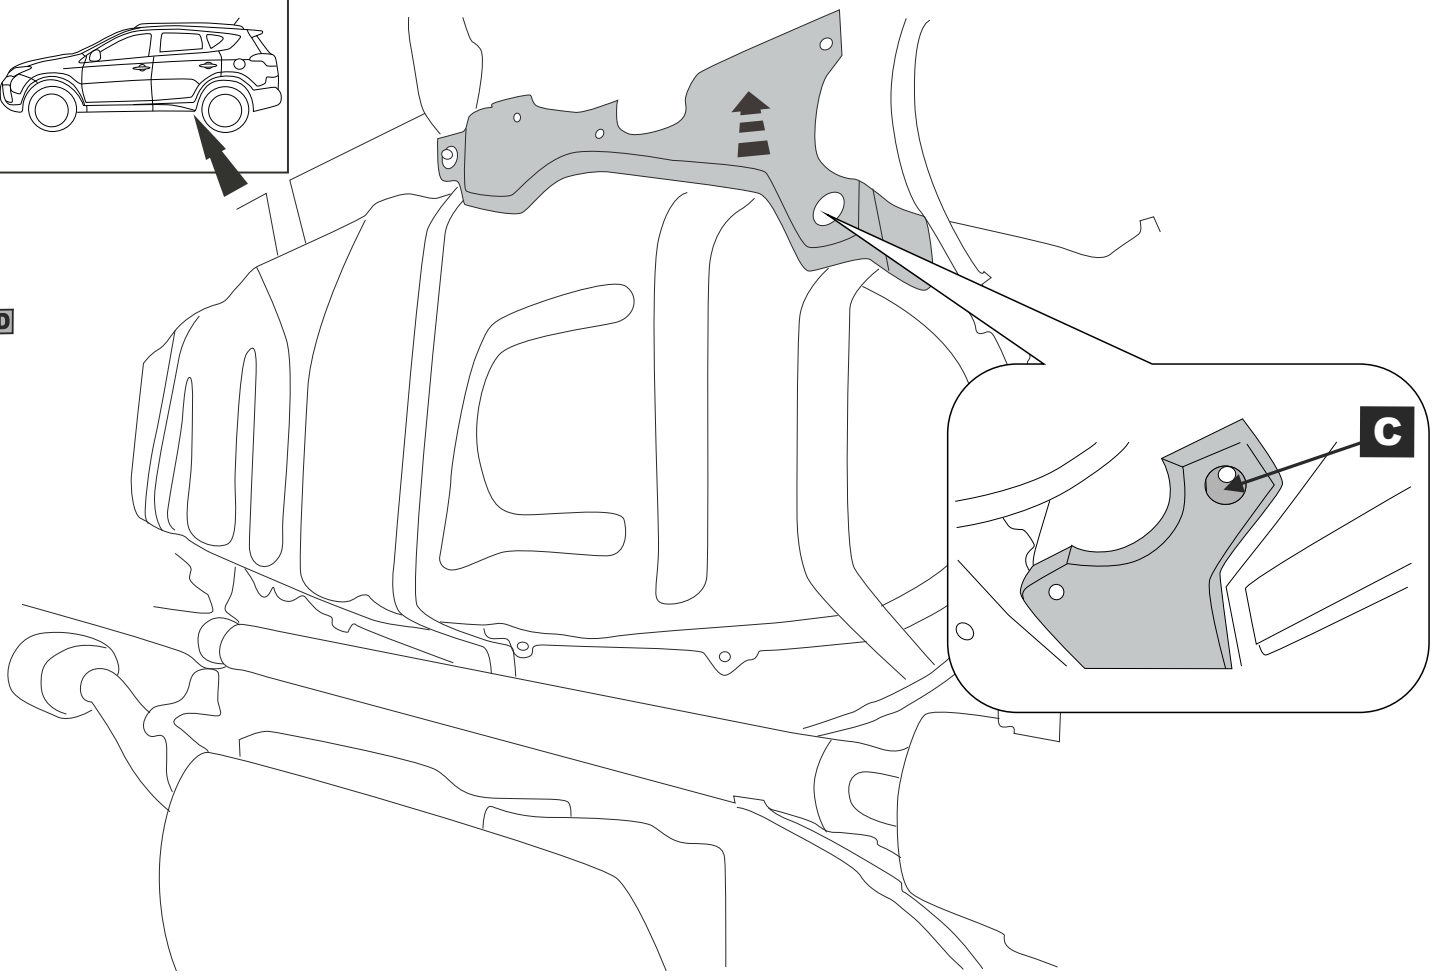 


6

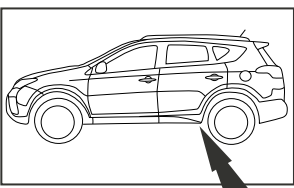 

FWD

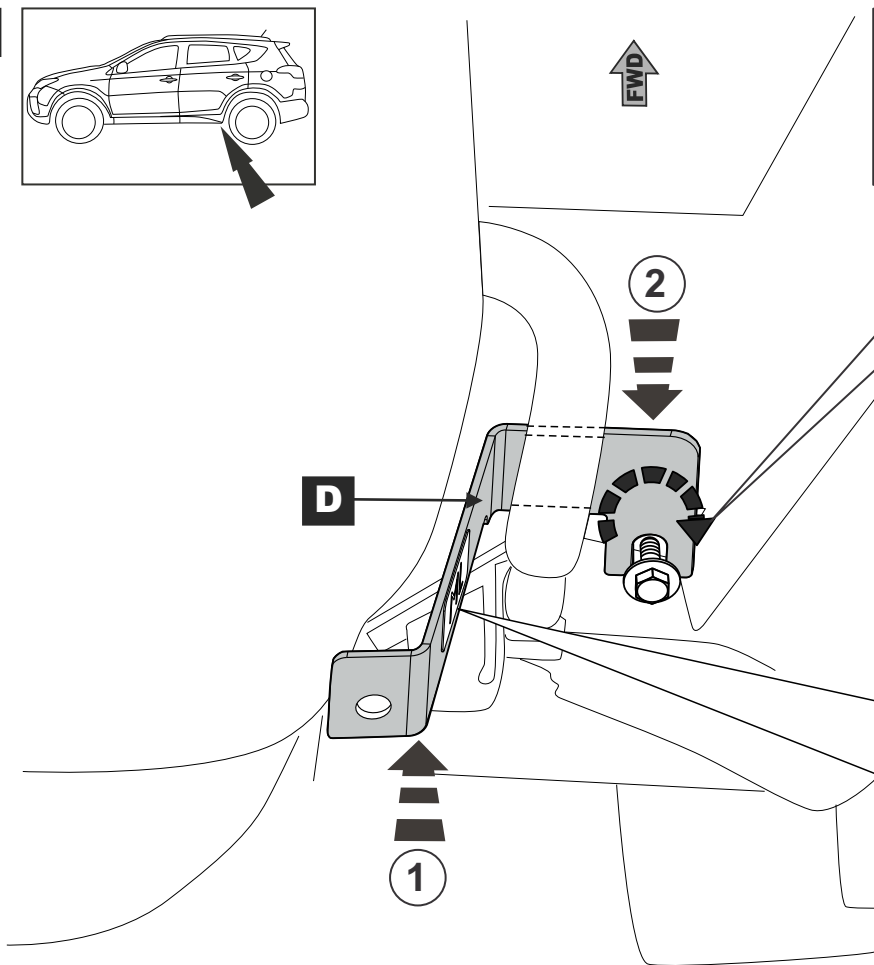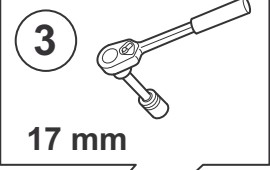  


7

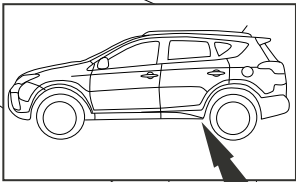 


3

 17 mm

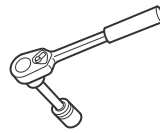

4

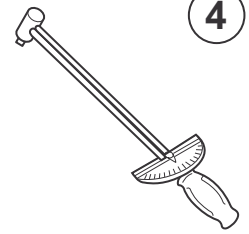 

45 Nm

2



 
1



E




8

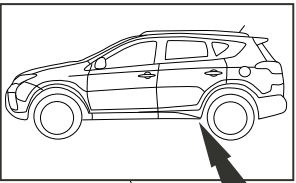

3

 17 mm

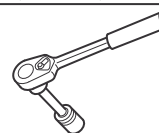

4



45 Nm

2



FWD



 
1



F



9

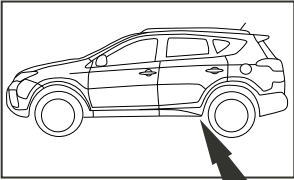


FWD




see repair manual




 
10

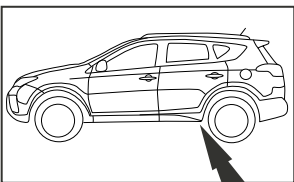

FWD

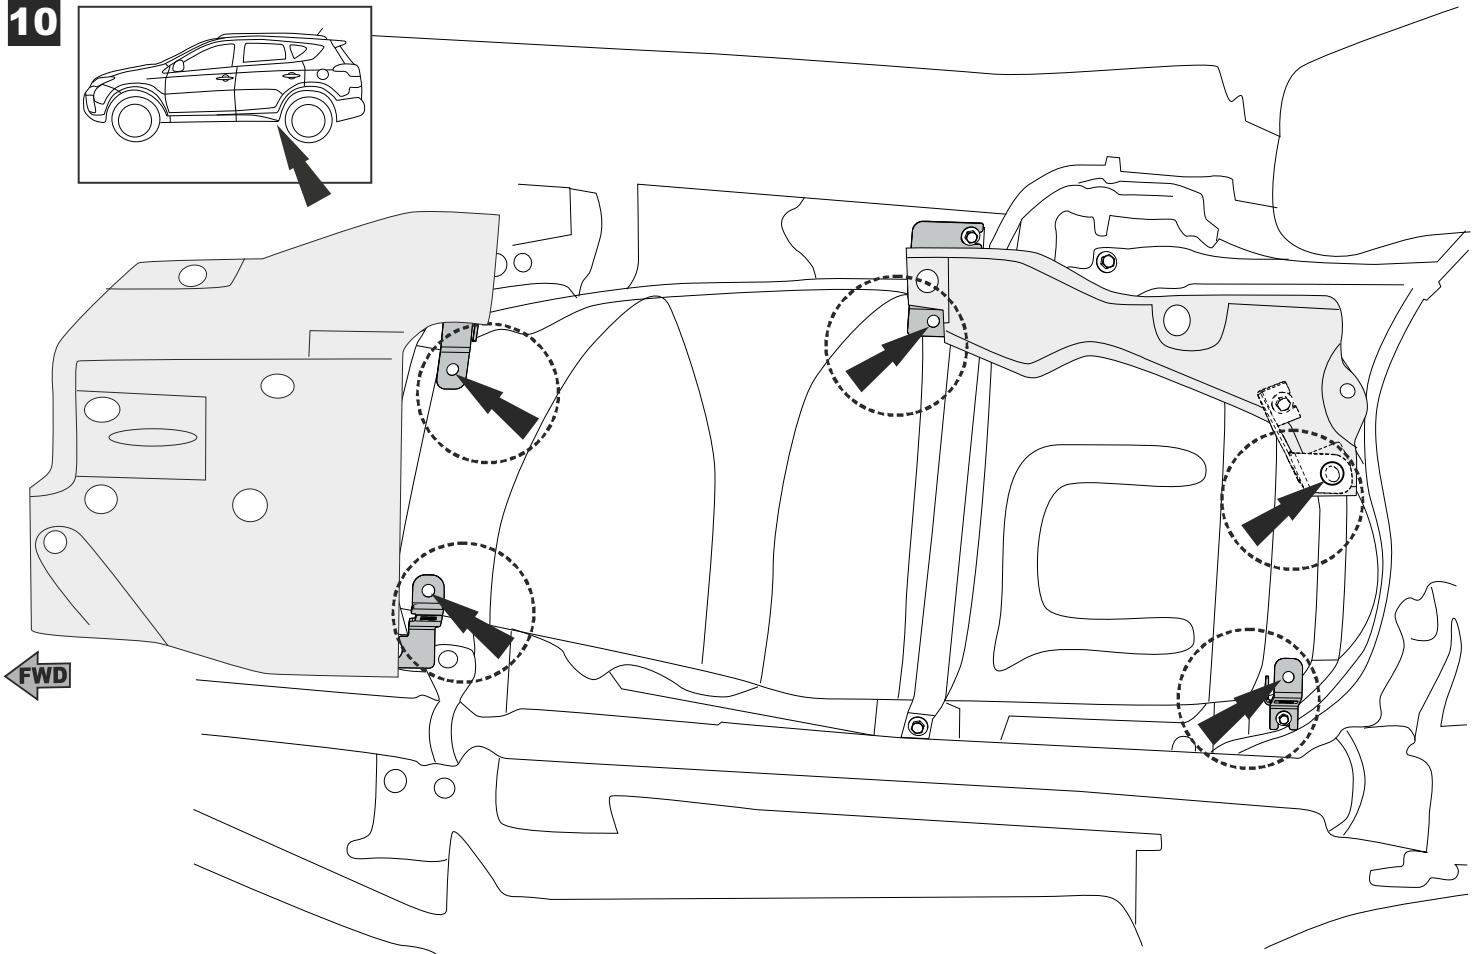 

11

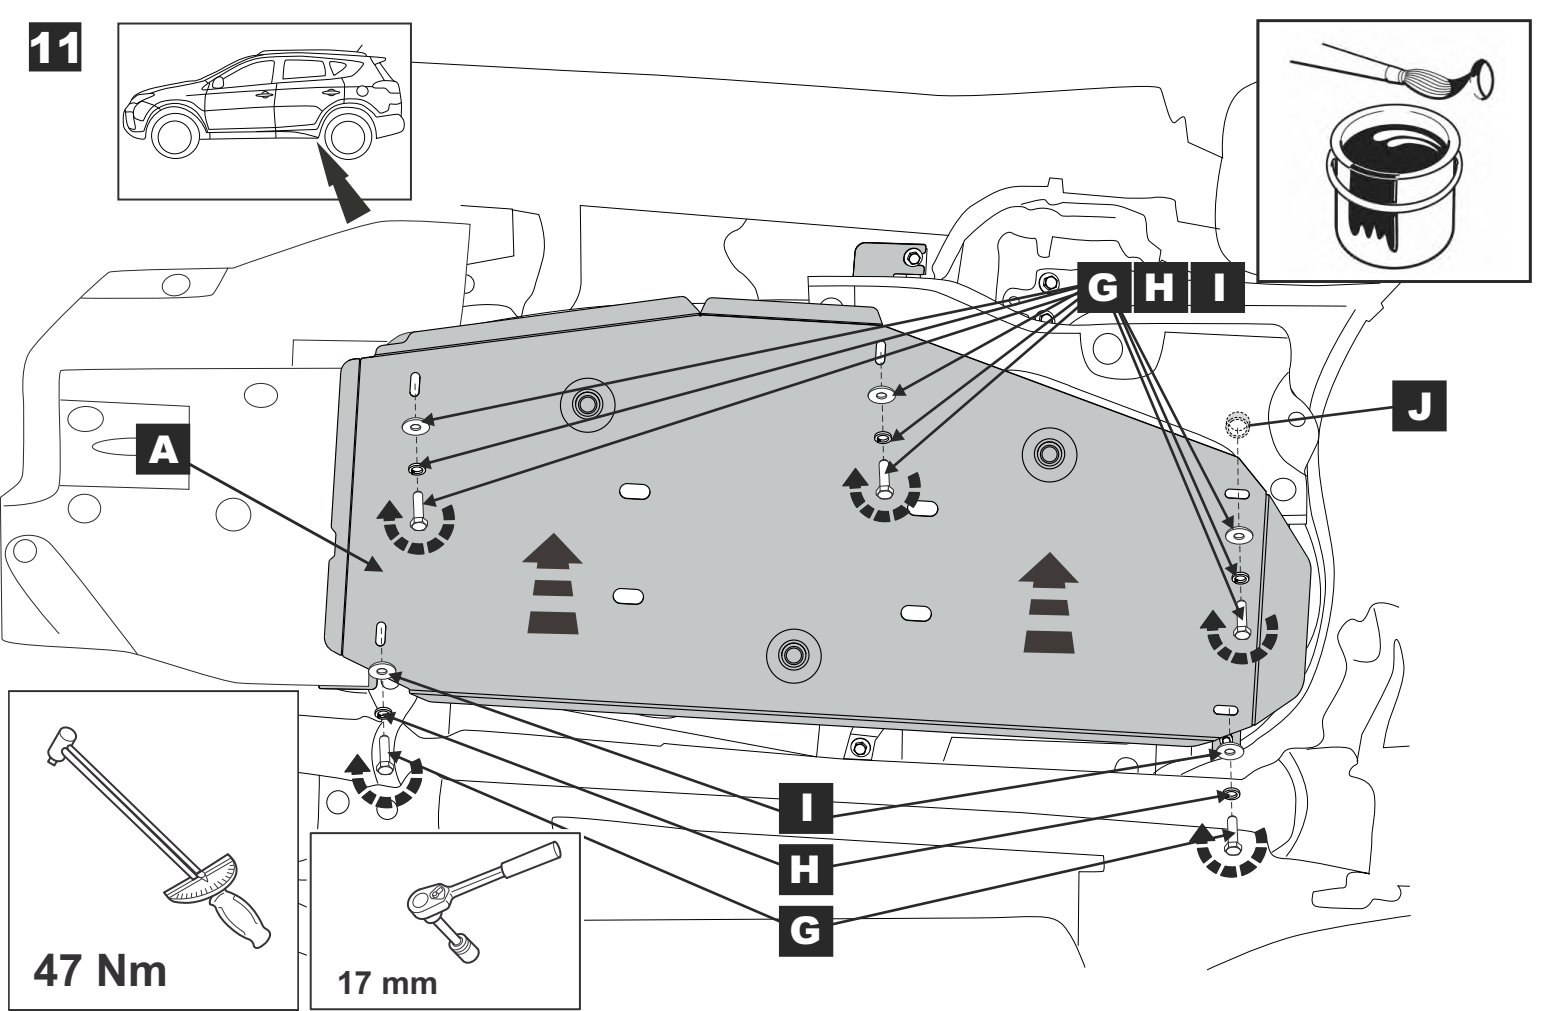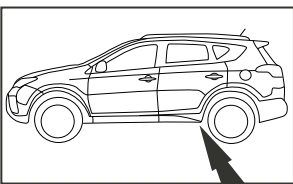  

12

