


Alfa Romeo 147

Years:2000-;

V: all;

TYPE :1.422

VIN:-

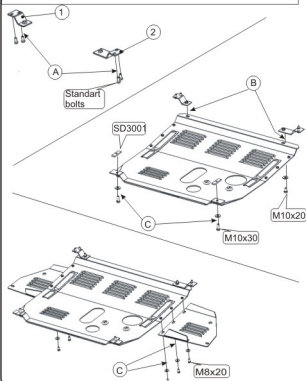

1. Disassemble the skid plate to component parts.
2. Fix corbels 1 and 2 to regular bolts located on the radiator beam. At that corbel 1 (which is shorter) should be fixed on the left side of the beam (A).
3. Mount embedded slats SD3001 into front axle beam apertures.
4. Fasten the front part of the skid plate to fixed corbels with bolts M 10x20 (B).
5. Fasten the rear part of the skid plate to embedded slats with bolts M 10x30 (C).
6. Install the 2 wings (D)
7. Tighten all screw joints.

