


Audi A4 / A6 (skid plate for AT case)

VIN:-

TYPE :2.359

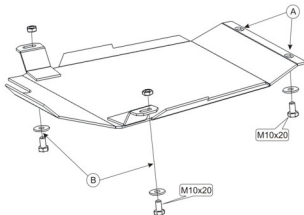

Mount this skid plate only after the skid plate for engine bay is installed.

1. Fix the front part of the skid plate to the already mounted skid plate for engine bay with bolts M 10x20 -(A).
2. Fix the rear part of the skid plate to car's load-bearing elements with bolts M 10x20 -(B).
3. Tighten all screw joints.



4 x M 10x20



4 x 10



2 x Nut M10