


# Audi A6

Body: years.:1994-1997; V: 2,5TD;  
 VIN:- MT TYPE :02.0490

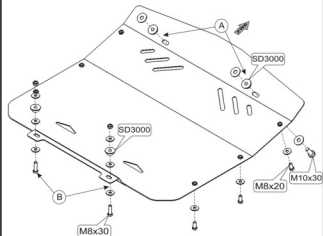

1. Remove OE plastic duster.
2. Remove its fastening bracket.
3. Put the skid plate under bumper and fix it to OE lugs with bolts M 10x30 -(A).
4. Fix the rear part of the skid plate to lugs located on the car frame with bolts M 8x30 -(B).
5. Additionally fix protective wings to the skid plate with bolts и M 8x20 -(C) - in the way show non the scheme.
6. Tighten all screw joints.

