



Audi Allroad

Body: Years :2000-2006- ; V:4.2;
VIN:- WAUZZZ4B83N002400 AT TYPE :02.667 -steel
TYPE :02.669 -aluminum

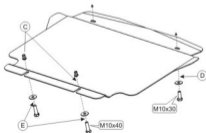

1. Remove OE dust guard.
2. Remove slat of the dust guard fastener.
3. Cut the plastic dust guard along the inner edge of the stiffening rib (right and left) -(A),(B); then mount its lateral Parts back o their places.
4. Insert spacer sleeves into the front axle beam apertures using special instrument -(C).
5. Fix the front part of the skid plate to OE fixing points with bolts M 10x30 -(D).
6. Fix the rear part of the skid plate to mounted spacer sleeves with bolts M 10x40 -(E).
7. Tighten all screw joints.

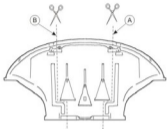

2 x M 10x30
2 x M 10x40



3 x 8
4 x 10



2 x spacer sleeve