


# Audi Allroad- for AT case

Body: Years.:2000-2006; V: ---;  
VIN:- AT TYPE :02.668-steel  
TYPE :02.670-aluminum  
The skid plate should be installed together with  
The skid plate for engine bay; 02.667-steel  
02.669-aluminum

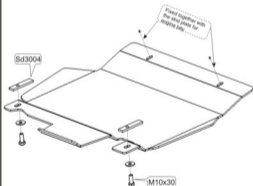

1. Fix the front part of the skid plate to spacer sleeves with bolts M 10x40.
2. Fix the rear part of the skid plate to the car frame with bolts M 10x30 and threaded inserts SD3004.

