


Audi Q7

Body: Years.: 2006- ; V:4.2
VIN:- AT Type: 02.942 (Al)
Type: 02.943 (Steel)

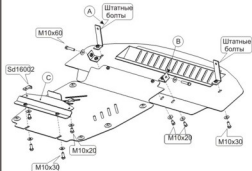

1. Remove regular plastic duster.
2. Disassemble the skid plate to component parts.
3. Loosen those bolts fastening bumper to longerons which are located farther from the radiator.
4. Fix corbels "A" under loosened bolts (A).
5. Fix corbels "B" to elements of the stabilizer's fasteners/.
6. Fix the front part of the skid plate to mounted elements.
7. Fix the skid plate's beam "C" to the crossbar (of the car frame)
8. Fix the skid plate's body over already mounted front part and join them.
9. Fix the rear part of the skid plate's body to the already mounted beam.
10. Tighten all screw joints.

