


Audi Q7 - Skid palte for reduction gear box

Body: Years.: 2006- ; V: VIN:- AT Type: 02.944

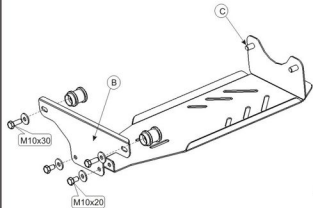

1. Disassemble the skid plate to component parts.
2. Join guiding bushes with element "B" using bolts, but do not tighten bolts yet.
3. Insert guiding bushes (of element "B") into apertures in the load bearing element (from the muffler's side).
4. Insert bolts located in the front plate into apertures in the front part of the car frame -(C).
5. Join elements of the skid plate with bolts.
6. Tighten all screw joints.



1 x

Rear plate



2 x

Guiding bush



2 x

M 10x20

2 x

M 10x30



4 x

10