


# Audi Allroad | A6

Body:

Years.: 2006- ;

VIN:-

Type: 02.0955 Aluminium

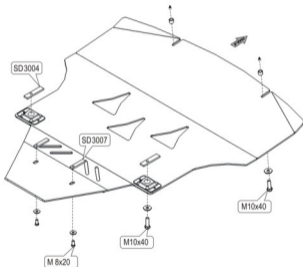

1. Disassemble the skid plate to component parts.
2. Screw out 2 bolts M10 located in the front part of the OE duster.
3. Slightly screw in bolts M 10x40 through bushings  $\varnothing$  16x14x2 in vacant apertures (see step 2)
4. Fix threaded inserts to the rear part of the car frame..
5. Put the front part of the skid plate on mounted bolts so that the bushing is located between the vehicle and the skid plate..
6. Fix the rear part of the skid plate to mounted threaded inserts.
7. In addition fix the middle part of the skid plate to the vehicle's crossbar.
8. Tighten all screw joints.



2 x -SD 3004  
2 x -SD 3007



2 x Bushing  $\varnothing$  16x14x2



2 x M 8x20  
4 x M 10x40



2 x 8  
4 x 10