


Audi Q7 TDI

Body:
VIN:-

Years.: 2006- ;

V: 3.0

Type: 02.1020
Type: 02.1021 Al

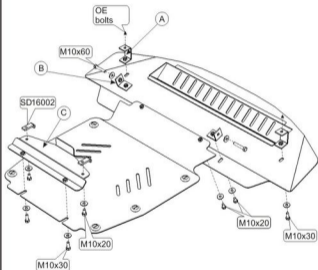

1. Remove OE plastic duster.
2. Disassemble the skid plate to component parts.
3. Unscrew two bolts of the radiator's beam fastener.
4. Fix brackets "A" under unscrewed bolts .
5. Fix corbels "B" to stabilizer fasteners.
6. Fix the front part of the skid plate to mounted elements.
7. Fix the skid plate's beam "C" to the cross bar of the car frame.
8. Put the rear part of the skid plate over the front part and join both parts to each other
9. Fix the rear part of the skid plate to mounted beam in rear..
10. Tighten al screw joints.

