

Audi Q7

Body:


Years.: 2006- ;

V : 3.0 TDI

Type: 02.1022

Type: 02.1023 AI

VIN:-

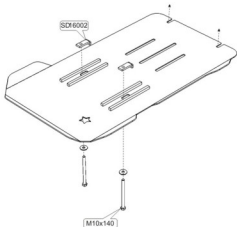

1. Install this skid plate only after the skid plate for engine bay is already mounted.
2. Fix the front part of this skid plate together with the rear part of the skid plate for engine bay.
3. Fix the rear part of this skid plate to the gear box supporting beam.
4. Tighten all screw joints.

