


BMW 5 skid plate for AT case

Body: E-39

VIN:- TYPE :3.404

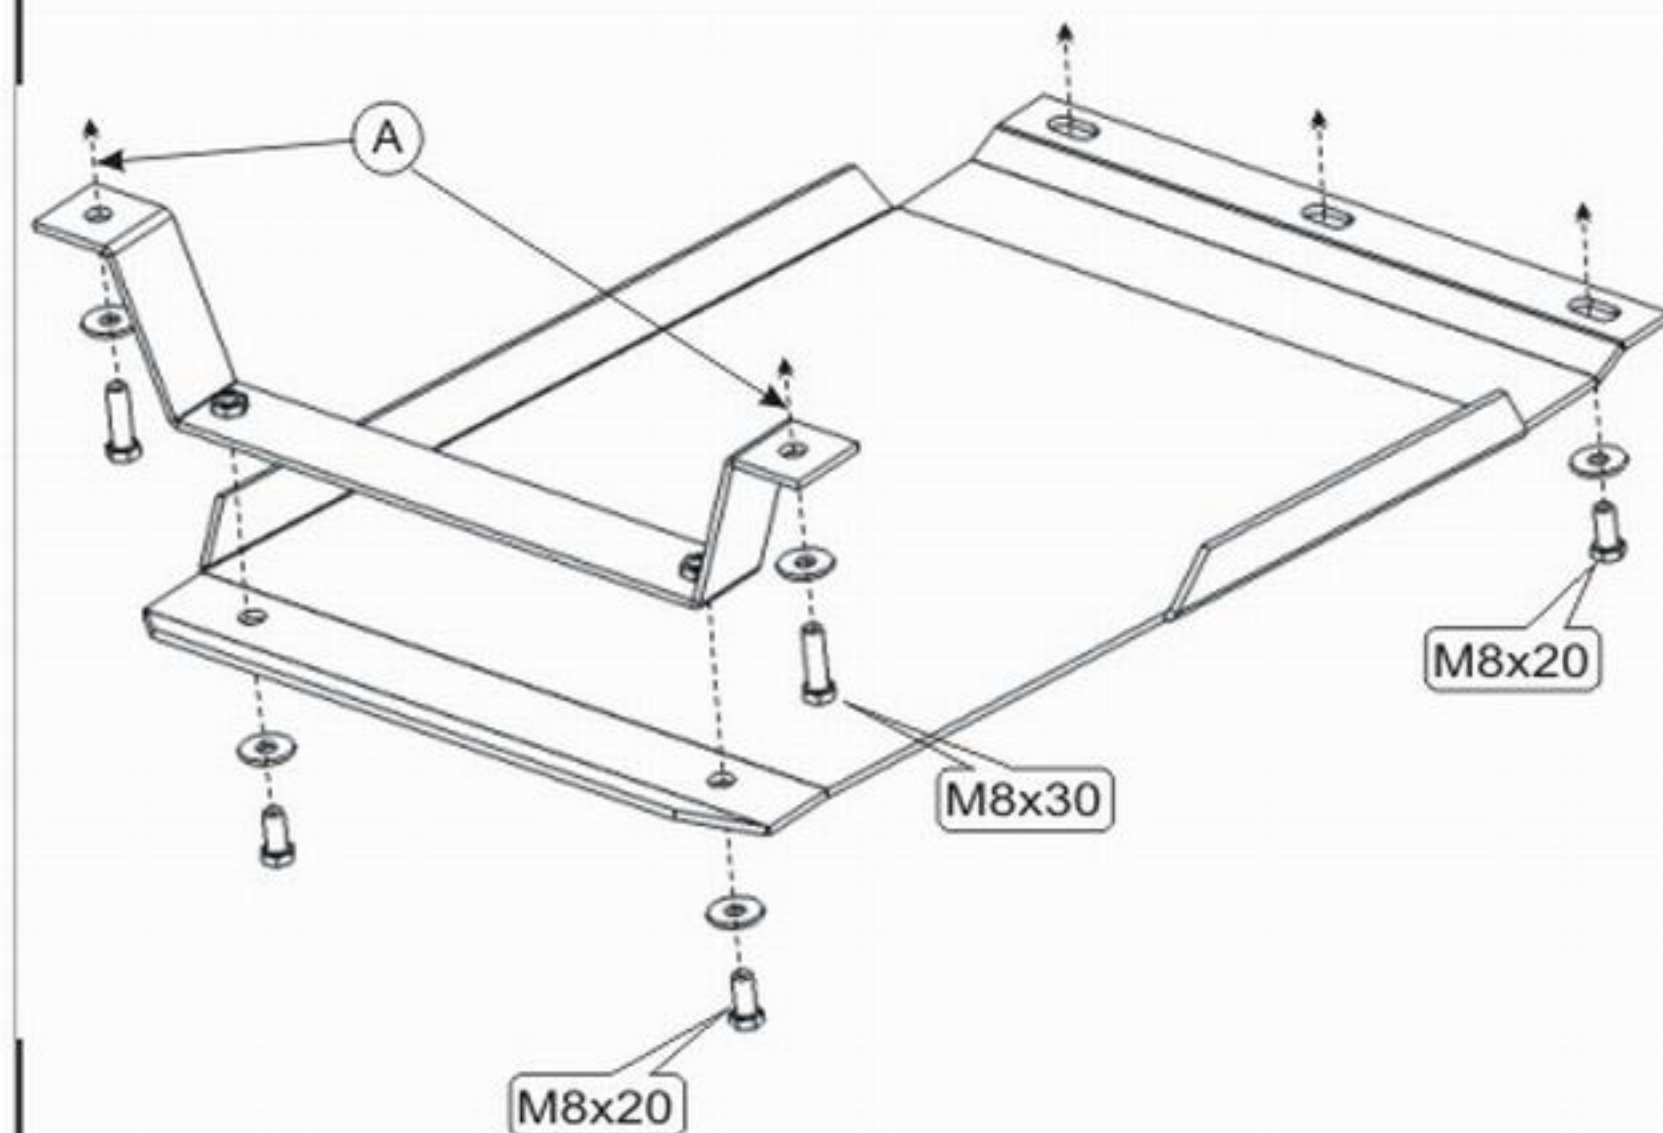

1. The skid plate should be installed together with the skid plate for engine bay 03.294.
2. Fix the skid plate's beam to the car's load bearing elements with bolts M 8x30 -(A).
3. In front fix the skid plate to the already installed skid plate for engine bay; fix it to mounted beam with bolts M 8x20 in rear.
4. Tighten all screw joints.



5 x M 8x20
2 x M 8x30



7 x 8

