



# BMW X5 skid plate for AT case

Body: **Art.Nr. 03.0654**  
VIN- **03.1130**

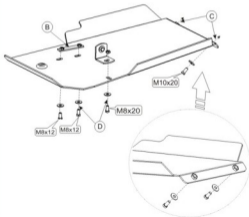

1. Fix the lug to the transmission case support (at the side) with bolt M 8x20 -(A).
2. Fix the strap to the transmission case support- (B).
3. Fix the front part of the skid plate to already installed skid plate for engine bay with bolts M 10x20 -(C).
4. Fix the rear part of the skid plate to mounted lug with bolts M 8x20 -(D).
5. In addition fix the skid plate to mounted strap with bolts M 8x12 -(D).
6. Tighten all screw joints.



2 x M 8x12  
2 x M 8x20  
2 x M 10x20



1 x Nut M8



4 x 8  
2 x 10



1 x Lug