


BMW X3

Body: Years.: 2005- ; V: all
 VIN:- AT Type: 03.869
 Type: 03.870 (AL)

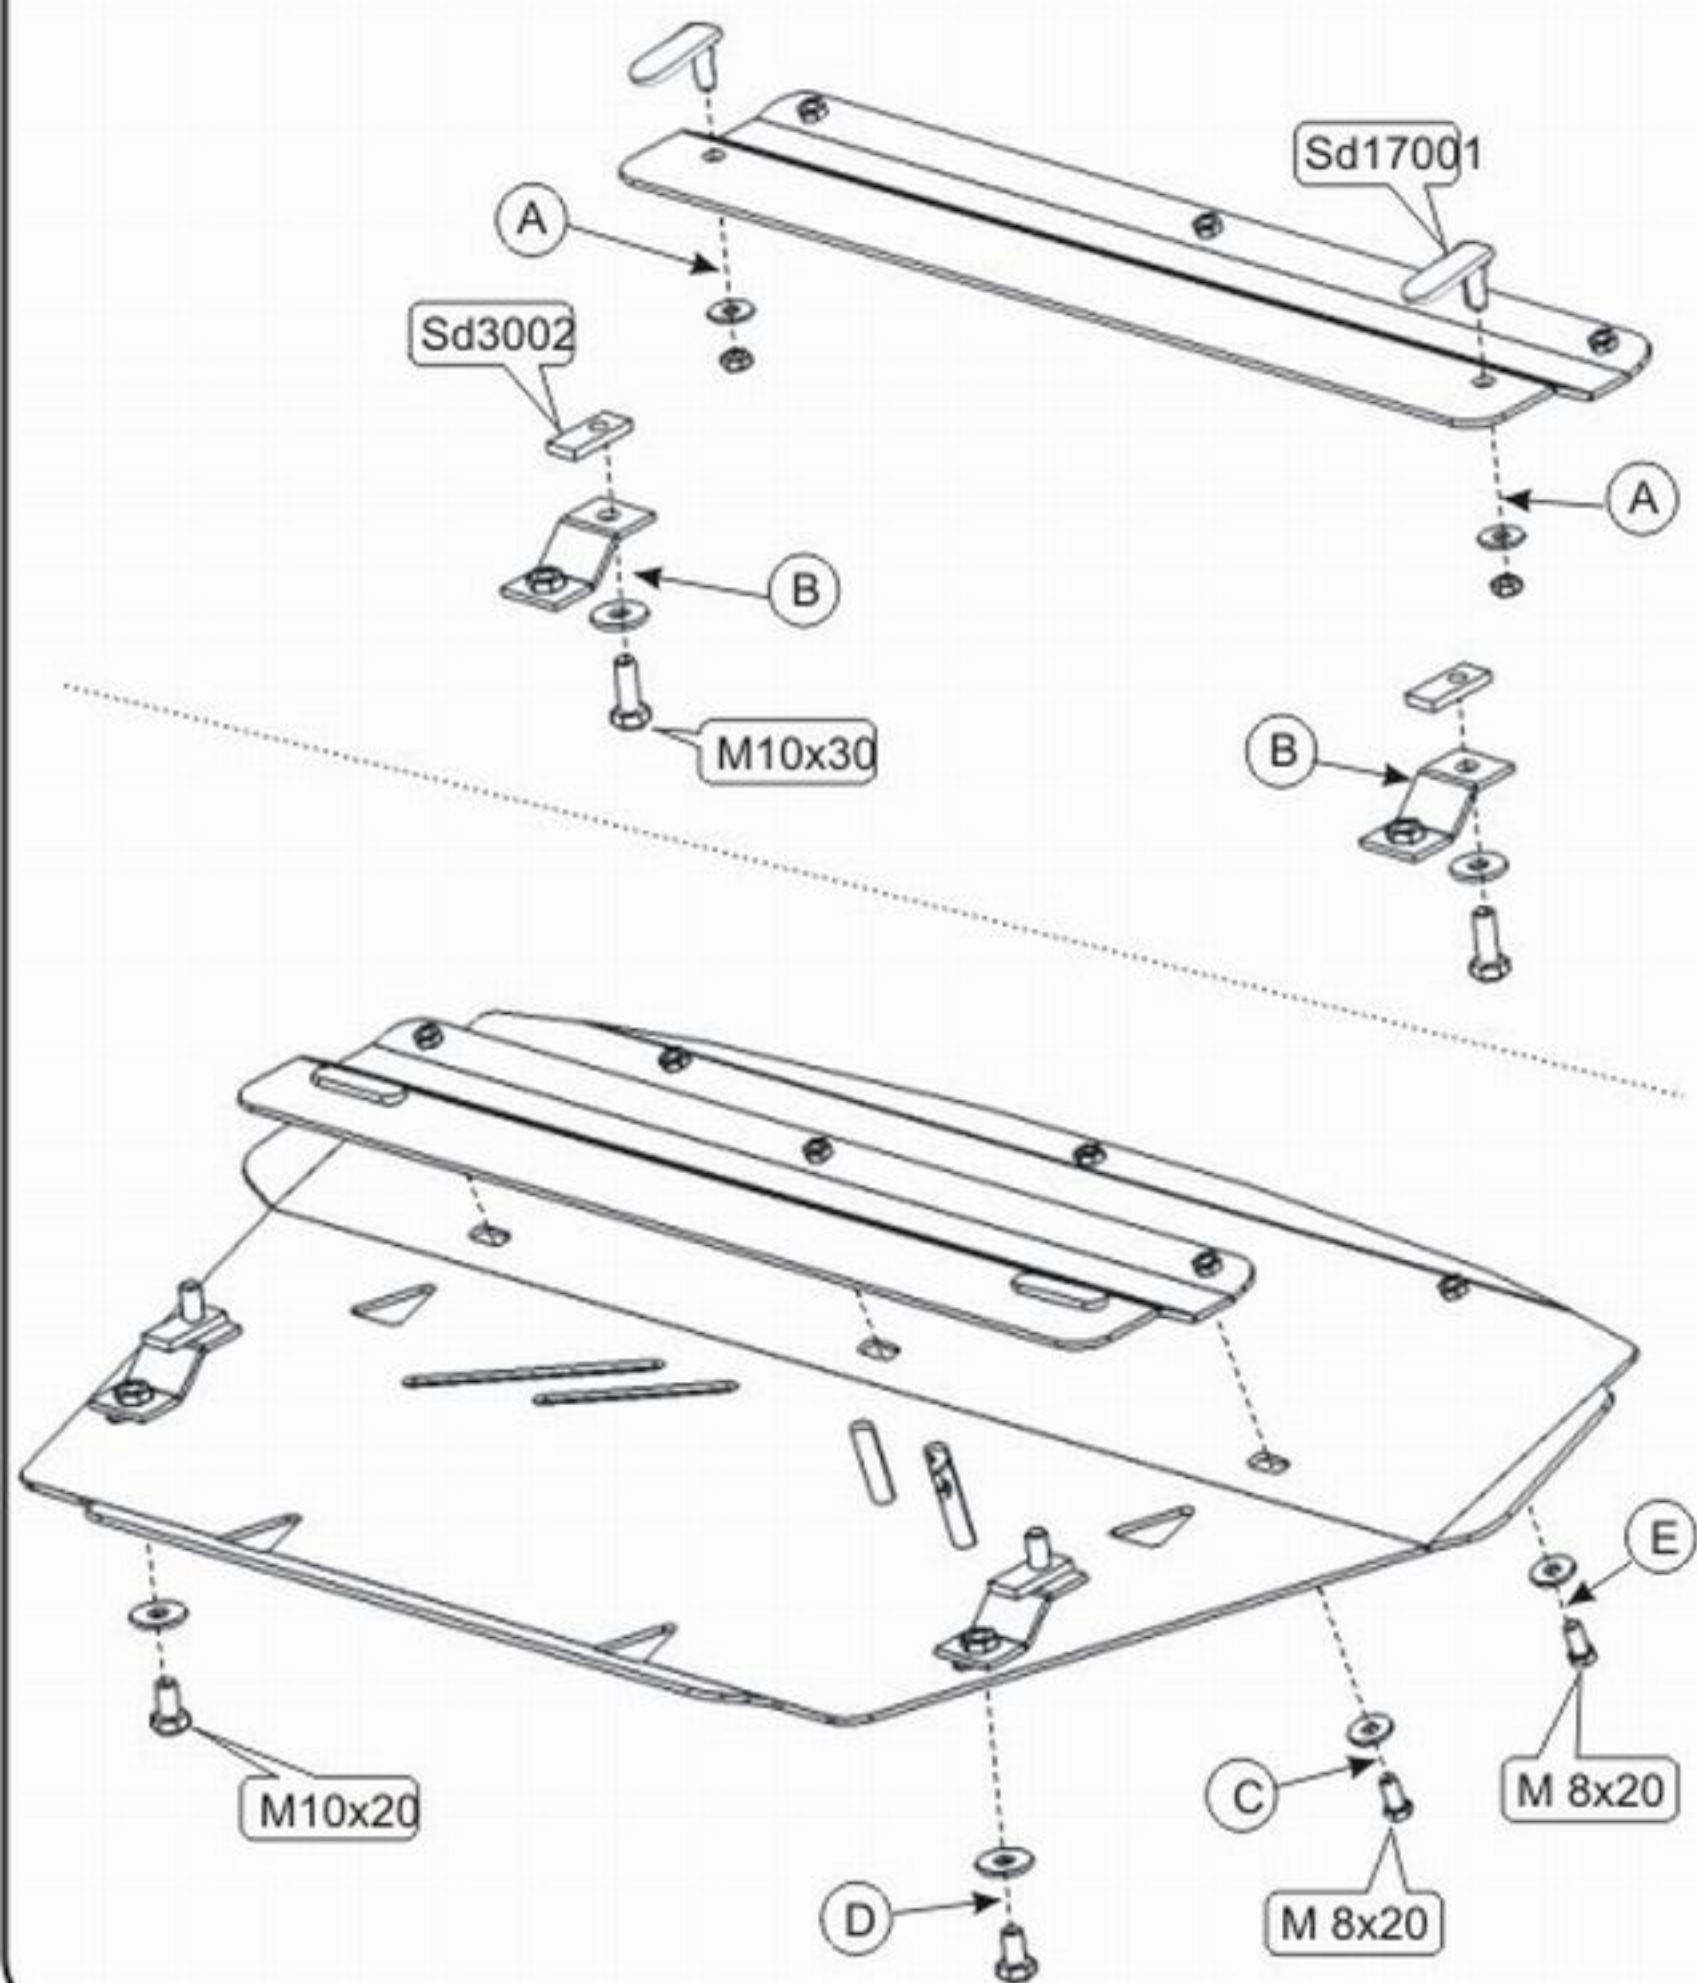

1. Remove regular plastic dust guard.
2. Insert special bolts Sd17001 into the car frame apertures and fix the skid plate's beam to them.
3. Fix straps Sd3002 to next car frame apertures. Then fix corbels to mounted straps with bolts M 10x30.
4. Push the skid plate under the bumper and fix it to mounted beam with bolts M 8x20 and to corbels - with bolts M 10x20.
5. Join the lower part of the bumper with the skid plate with bolts M 8x20.
6. Tighten all screw joints.

