



Dodge Neon; Plymouth Neon

Body: year.:1999-; V: 2,0;
VIN:- 1B3ES46C1YD500000 AT TYPE :4.494

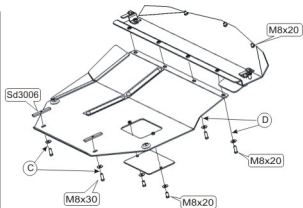

1. Disassemble the skid plate to component parts.
2. Fix straps with bolts M 10x40 to the radiator beam.
3. Fix lugs to mounted straps.
4. Fix the front part of the skid plate to mounted lugs with bolts M 10x20 (B).
5. Set straps Sd3006 into the front axle beam apertures.
6. Fix the rear part of the skid plate to the installed front part with bolts 8x20 (D) and to mounted straps with bolts M 8x30 (C).
7. Tighten all screw joints.

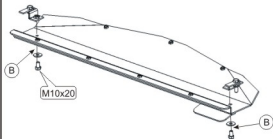

2 x Strap with bolt M10x40



2 x Lug



9 x M 8x20
2 x M 8x30
2 x M 10x20



11x 8
4 x 10



2 x Nut M10



2 x 90x15x45 -SD3006