


Chrysler PT Cruiser

Body: Year.:2000-; V: 2,0; 2,2; 2,4;
VIN:- Steel: TYPE :4.541
Aluminum: TYPE :4.656

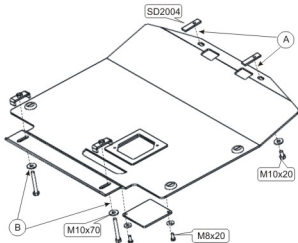

1. Disassemble the skid palte to component parts.
2. Fix straps SD2004 to lugs located on the radiator beam
3. Fix special straps to the front axle beam apertures.
4. Fix the front part of the skid plate to mounted elements with bolts M 10x20 -(A), rear part - with bolts M 10x70 -(B)
5. Tighten all screw joints.

