

Dodge Caliber / Chrysler Jeep Compass

Body:


Years.: 2006- ;

V: 1,8-2,0


AT

Type:04.951

Type:04.952(AL)

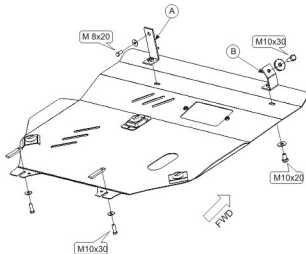

1. Disassemble the skid plate to component parts.
2. Fix corbel "A" to the regular aperture in the radiator's beam.
3. Fix corbel "B" to the towing lug.
4. Fix bolts with straps into the fron axle beam apertures.
5. Fix the skid plate to already mounted bolts and corbels.
6. Tighten all screw joints.



3 x M 8x20
2 x M 10x20
3 x M 10x30



3 x 8
5 x 10