
## **Grand Cherokee WH**

Bj. 2006-

Art.Nr. 04.0972 04.1133

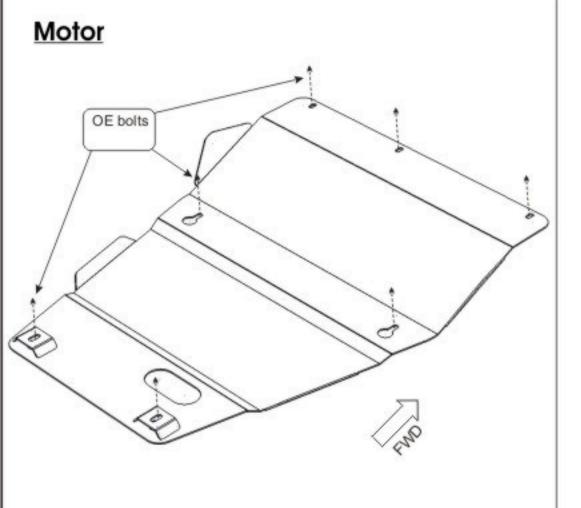



- Remove plastic dust guard.
- Slightly screw in regular bolts located in the front part of the car frame and put the skid plate on these bolts.
- Fix the rear part of the skid plate to regular fixing points.
- Fix the front part of the skid plate to the radiator's beam
- Tighten all screw joints.