


# Dodge Nitro

Type: 04.974

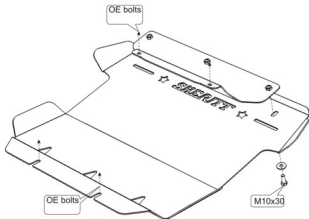

1. Remove OE plastic duster.
2. Fix the front beam of the skid plate to regular fixing points in the car frame..
3. Fix the front part of the skid plate to mounted beam with bolts M10x30.
4. Fix the rear part of the skid plate to OE apertures.
5. Tighten all screw joints.

