


Chevrolet Captiva

Body: Year.: 2006- ;
VIN:- XVFCD26GI7A000026 MT

V: All
Type: 04.1791 Steel
Type: 04.1074 Aluminium

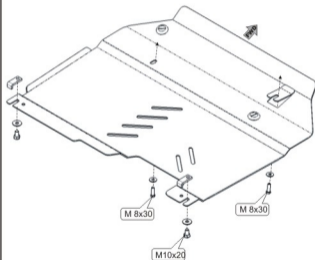

1. Loosen two bolts fastening the bumper's skirt.
2. Fix threaded inserts with bolts to apertures in the car frame (near the steering rod fastener)
3. Put the rear part of the skid plate over mounted bolts and fix the skid plate in front with bolts M 8x30.
4. Tighten all screw joints.

