


Dodge Journey

Body: Years.: 2008- ; V: 2.4
VIN:- 3D4GGB7BX9T237580 AT Ref.: 04.1508

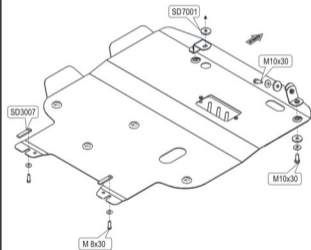

1. Disassemble the skid plate to component parts
2. Mount bracket with an OE bolts fastening engine supporting beam.
3. Mount skid plate's lug to vehicles towing lug.
4. Fix threaded inserts with bolts into the front axle beam apertures.
5. Put the rear part of the skid plate on mounted bolts and fix the skid plate in front through spacers to mounted elements
6. Tighten all screw joints.

