

Fiat Scudo Fiat Ulysse

07.0205

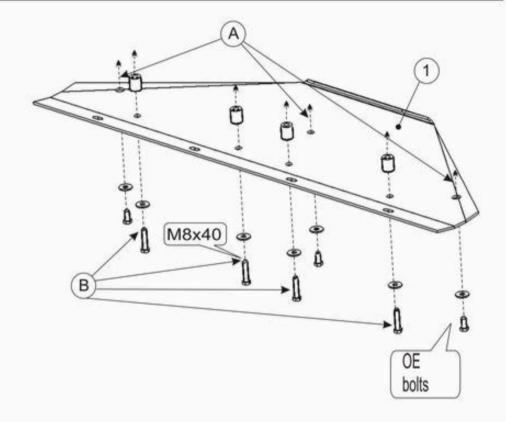

- 1. Disassmeble the skid plate to the component parts.
- 2. Unscrew three bolts fastening bumper skirt.
- 3. Put element (1) on lower bumper edge and fix it with OE bolts together with bumper (A).
- 4. Additionally fix element (1) edge to OE apertures with bolts M 8x40 through bush—(B).

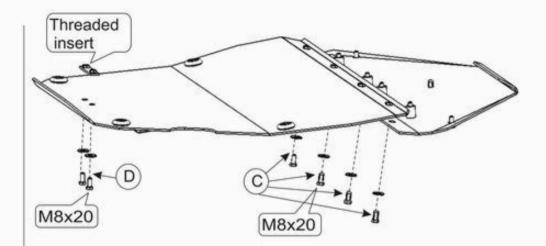

- 5. Fix special threaded insert to the rear car part.
- 6. Put the skid plate over element (1) and fix it with bolts M 8x20-(C)
- Fix the rear part of the skid plate to the already mounted threaded insert with bolts M 8x20-(D).
- 8. Tighten all screw joints.

