


Motor

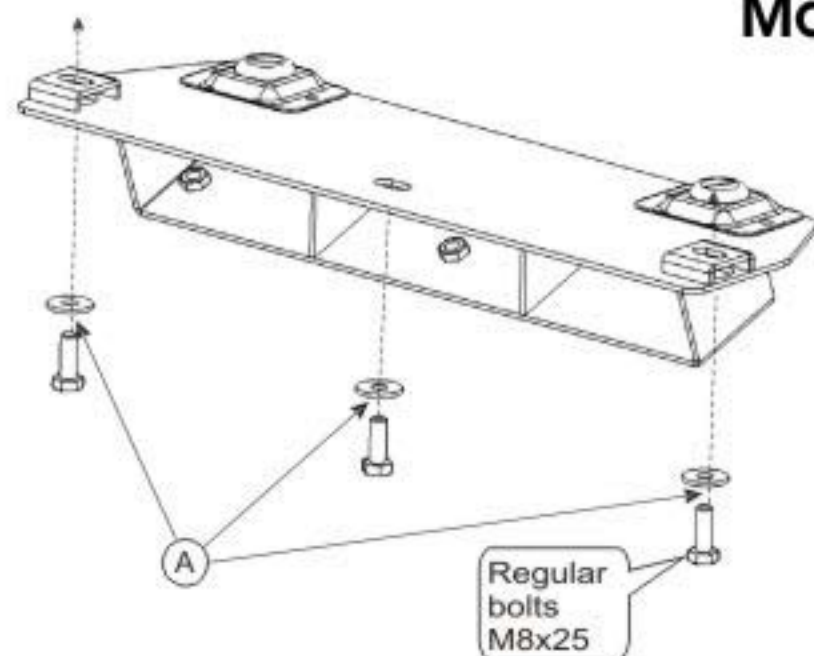

1. Remove regular protector.
2. Fix the front beam of the skid plate to the first car's frame cross bar with bolts M 8x25 -(A).
3. Fix straps SD3001 with bolts M 10x30 into the front axle beam slits -(B).
4. Put the rear part of the skid plate over mounted bolts. In front fix the skid plate to the already mounted beam with bolts M10x20 -(C).
5. Tighten all screw joints.

