

# Ford Kuga

Body:


Years.: 2008-;

V: 2.0D

VIN:- WFORXXGCDR8A66823

AT

Ref.: 08.1447

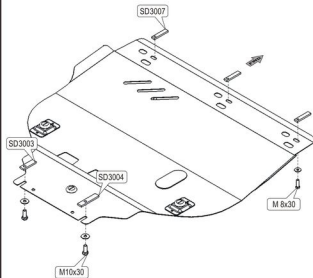

1. Remove OE plastic duster.
2. Remove plastic clips from radiator beam.
3. Fix threaded inserts with bolts into the front axle beam apertures - (A).
4. Mount threaded inserts over vacant radiator beam apertures - (B).
5. Put the rear part of the skid plate on mounted bolts M 10x30.
6. Fix the front part of the skid plate to mounted threaded inserts with bolts M 8x30. Hold threaded inserts with your hand (use apertures in the skid plate).
7. Tighten all screw joints.



1 X	-SD3003
1 X	-SD3004
3 X	-SD3007



3 x	M 8x30
2 x	M 10x30



3 x	8
4 x	10