


Honda CR-V RD8

Bj. 2002-

Art.Nr. 09.0034

Motor und Getriebe

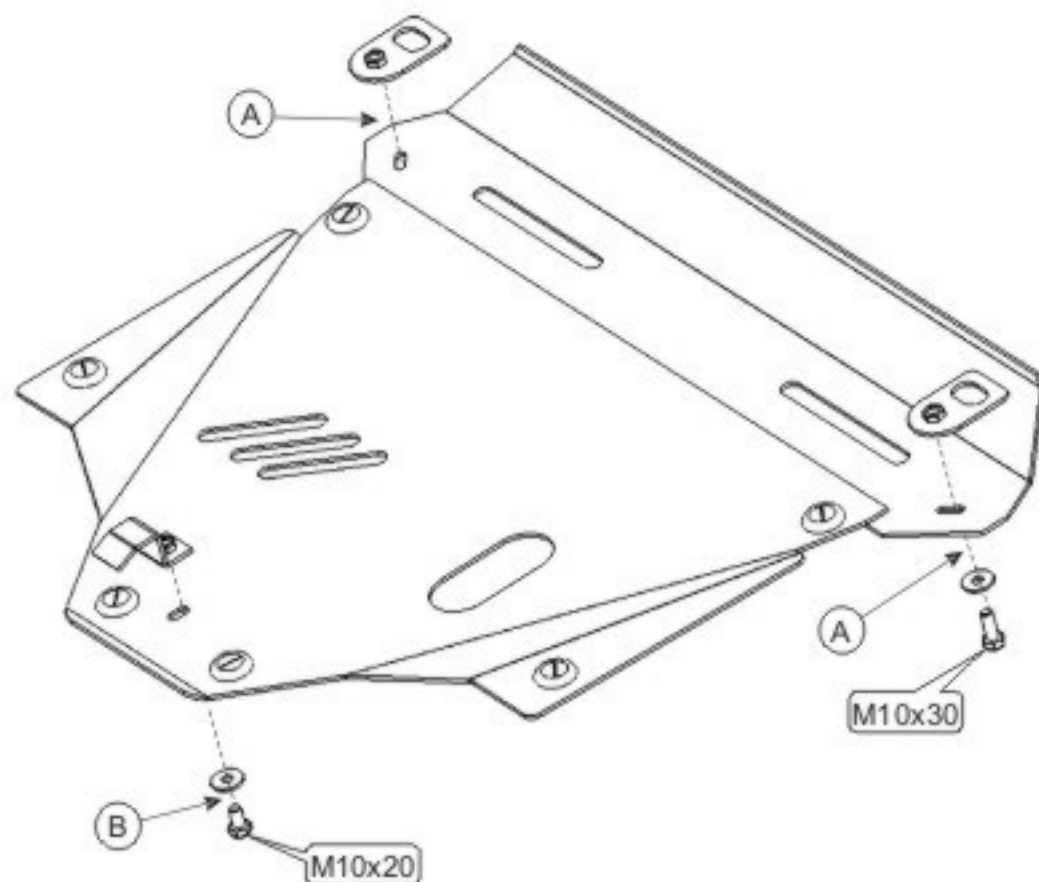


1. Disassemble the skid plate to component parts
2. Fix the straps SD3001 to the towing lugs of the car.
3. Fix the clamp to the rear part of the car frame.
4. Fix the front part of the skid plate with M 10x30 bolts (A); and its rear part with M 10x20 bolts (B).
5. Tighten all screw joints.



1 x M 10x20
2 x M 10x30



3 x 10

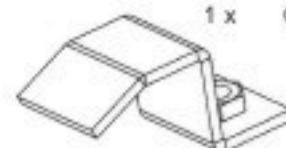

1 x Clamp



2 x Strap