
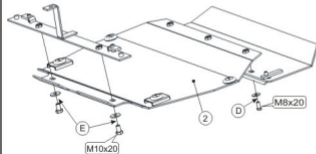


Honda Accord - VI

Body:
VIN:-

Years.:1999-2002;

V: all
TYPE :9.384

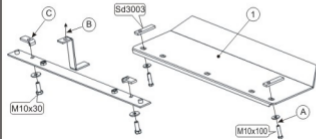

1. Disassemble the skid plate to component parts.
2. Fix element "1" to apertures in the front part of the car frame with bolts M 10x100 and straps SD3003 -(A).
3. Fix corbel using regular bolt, located near muffler's tube fixing Point, for additional support of the rear beam of the skid plate (B).
-
4. Fix the rear beam of the skid plate so, that joint-pins, located on the beam, hit apertures of the car frame, and then fix the beam with bolts M 10x30 and hold downs -(C).
5. Fix the skid plate to mounted element "1" with bolts M 8x20 -(D) and to installed beam with bolts M 10x20 -(E).
6. Tighten all screw joints.

