


Honda Accord

Year:2003-;


Vol.: 2,0;

VIN:-

TYPE :09.488

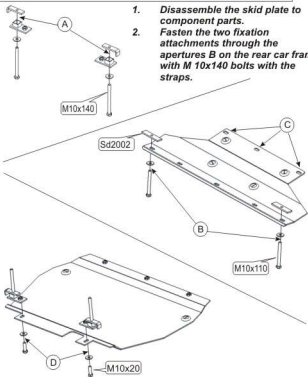

1. **Disassemble the skid plate to component parts.**
2. **Fasten the two fixation attachments through the apertures B on the rear car frame with M 10x140 bolts with the straps.**

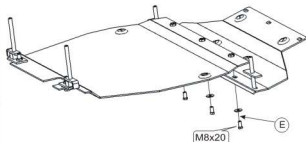

3. **Fasten the front part of the skid plate to the car frame with M 10x110 bolts with straps SD2002 (B).**
4. **Fix the standard fasteners (C).**
5. **Put the main part of the skid plate on top its front part and fasten the rear part to the already mounted attachments with M 10x20 bolts (D).**
6. **In the front join both parts of the skid plate with M 8x20 bolts (E).**
7. **Tighten all screw joints.**

