

# Honda FRV

Art. NR 09.0744

09.0745


09.0746

09.0747

Body:

Years.: 2005- ;

VIN:-

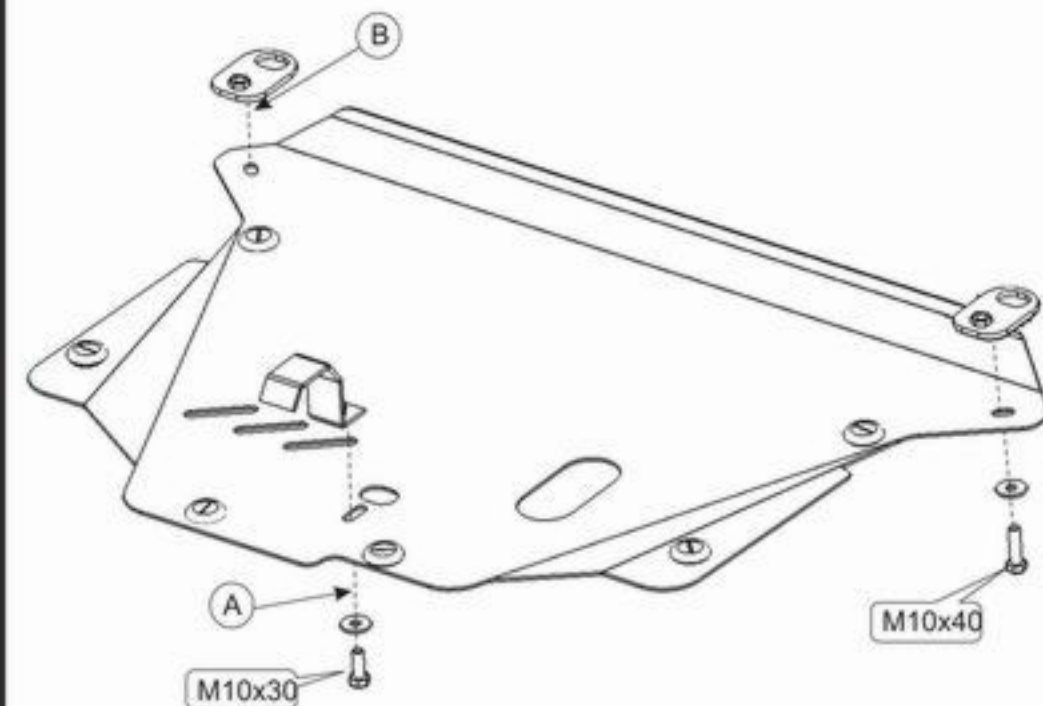

1. Disassemble the skid plate to component parts.
2. Fix the corbel over the car frame's beam.
3. Clasp the skid plate to the car frame and fix it to installed corbel with bolt M 10x30 -(A).
4. Fix the front part of the skid plate to towing lugs with bolts M 10x40 -(B).
5. Tighten all screw joints.



1 x Corbel



1 x Towing slat



1 x M 10x30  
2 x M 10x40

