


# Hyundai Sonata IV; V

Year:2000-;

Vol: all;

VIN:-

TYPE :10.227

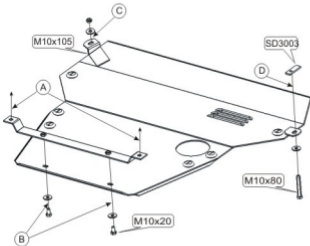

1. Disassemble the skid plate to component parts.
2. Fix the skid plate's beam to the load-bearing-elements using the standard bolts (A).
3. Fasten the skid plate to the beam using M 10x20 bolts (B).
4. Fasten the front part of the skid plate to the car frame using M 10x105 bolts and nuts (C); and M 10x80 bolts with the strap SD3003 (D).
5. Tighten all screw joints.

