

# HYUNDAI IX55

Body:


Assemblage year: 2009- ;

Engine: all

VIN:-

Ref.: 10.1573 Steel

Ref.: 10.1574 Aluminium

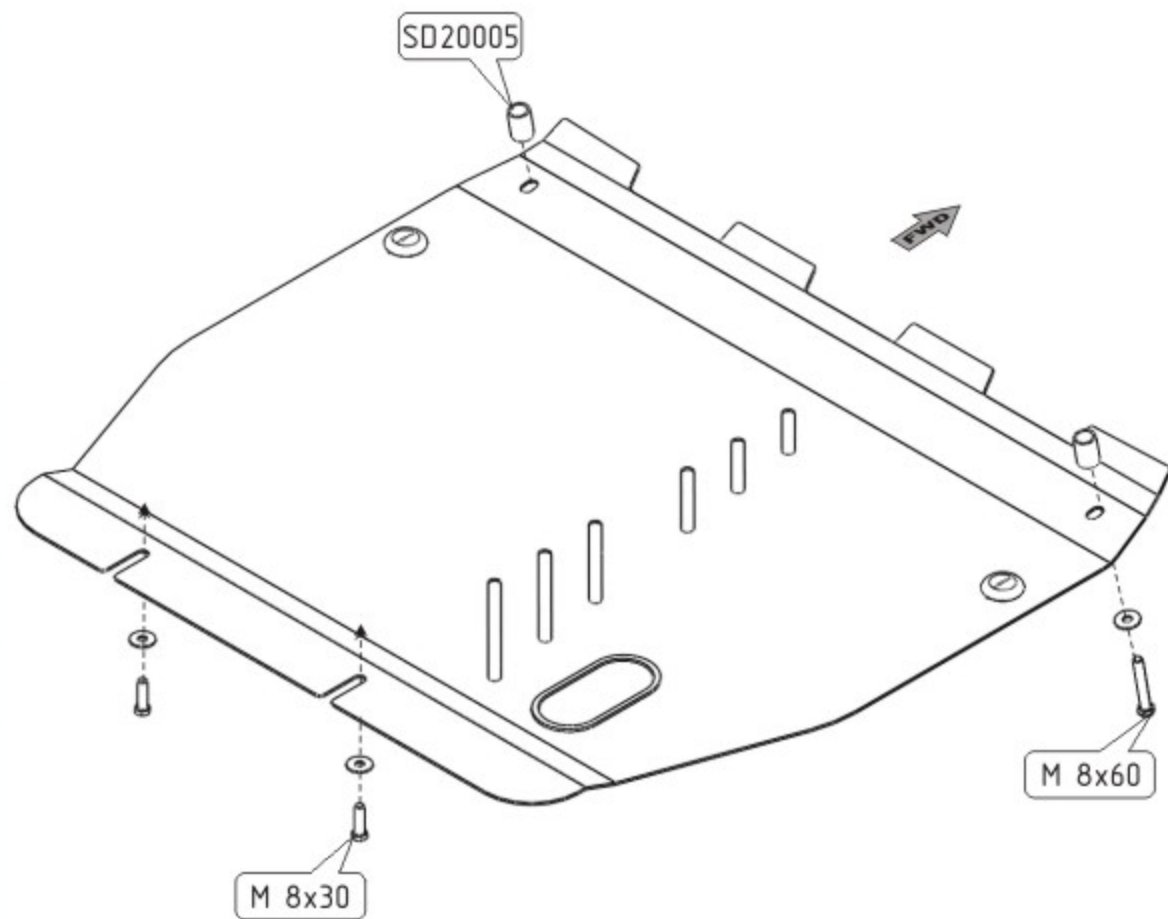

1. Mount M8x30 bolts into regular apertures of the subframe's rear part.
2. Install the rear part of the skid plate on the mounted bolts and fix the front part to the OE points with M 8x60 bolts.
3. Tighten all screwjoints.



2 x M 8x30  
2 x M 8x60



2 x Bush



4 x 8