

		Part number:
		10.2948
Part name Engine undercover		

# Genuine Accessories Installation Instructions



Model application  
2,2D AT 4wd

Installation time  
30 min

	Date 10/2015
--	-----------------


Part number:

**10.2948**

Model name: Santa Fe;


Model year: **2012 -**

**GB** Fitting instruction: engine undercover

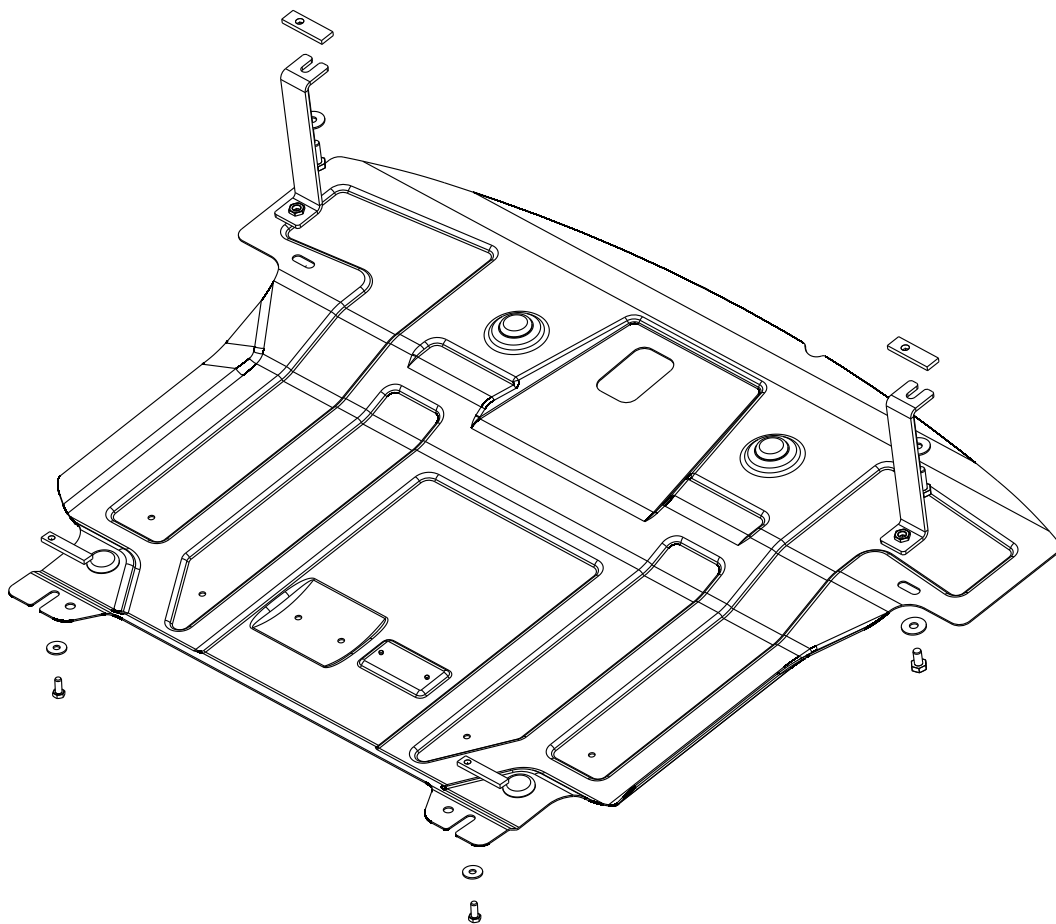

Part number:


**10.2948**

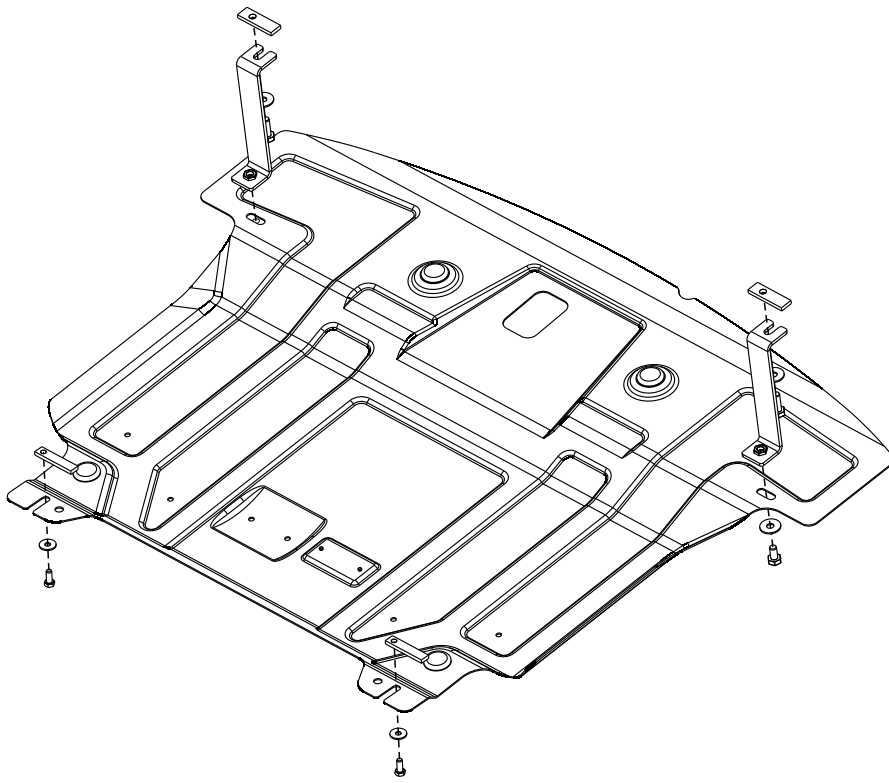


2x



2x





2x



2x M8x20  
2x M10x20  
2x M10x30



2x  $\varnothing 8$   
4x  $\varnothing 10$

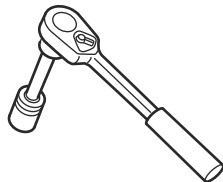


**GB**

Read this mounting manual carefully, before you start the installation. Warranty is granted only when installation is done correctly by your HYUNDAI dealer.


Part number:

10.2948



1

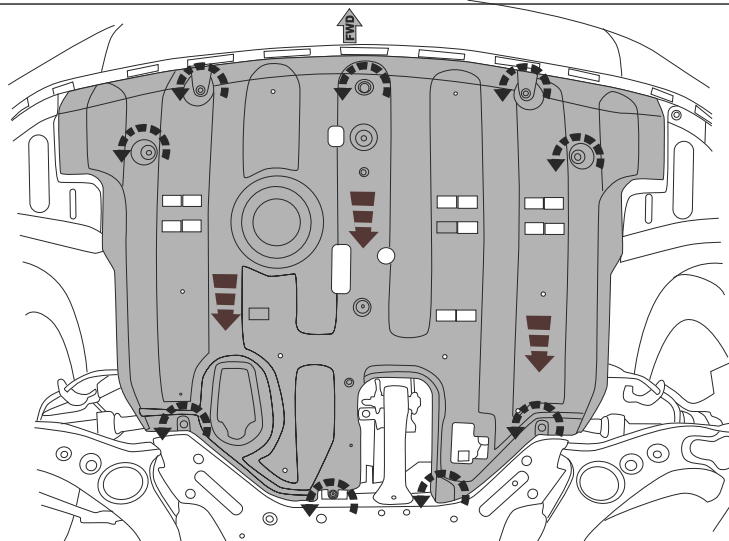


2

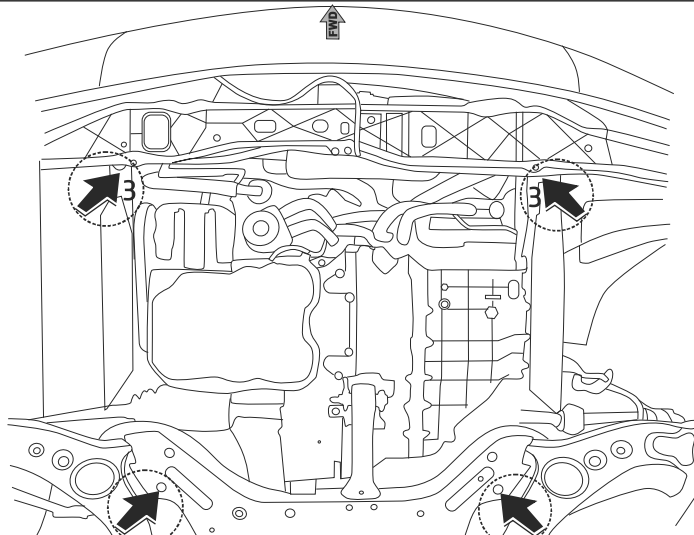

3




2xM10x30

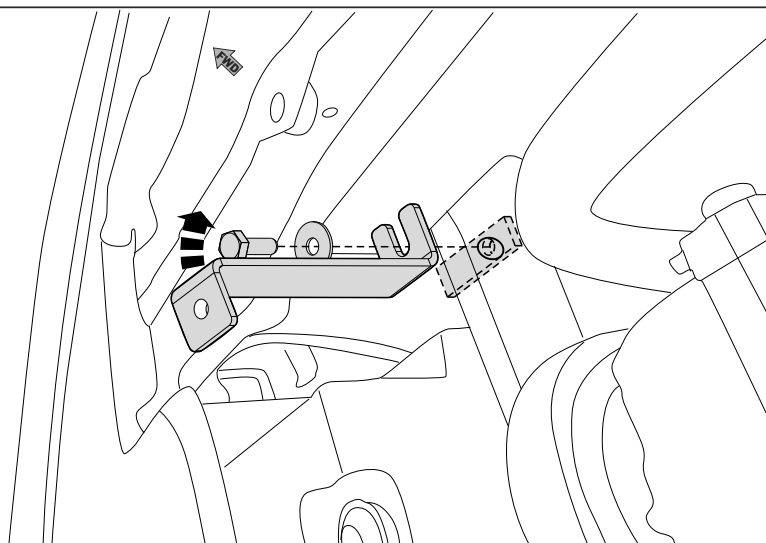

Part number:




10.2948

4

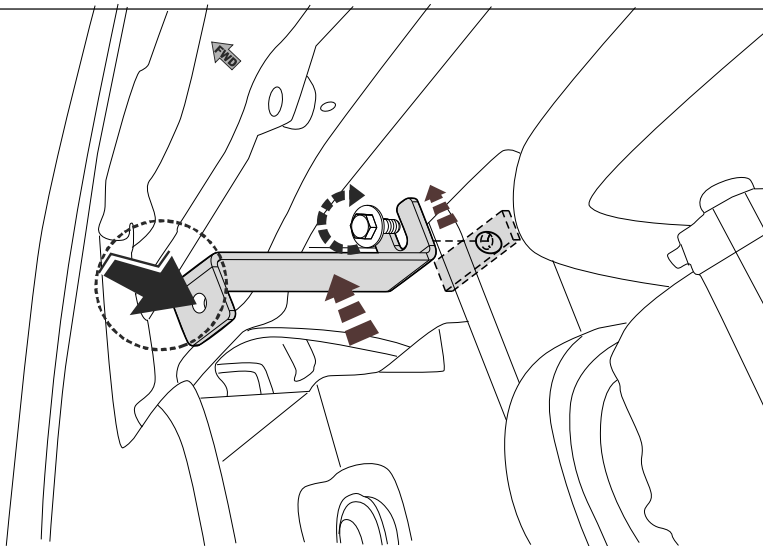


2xM10x30  
47 Nm

5

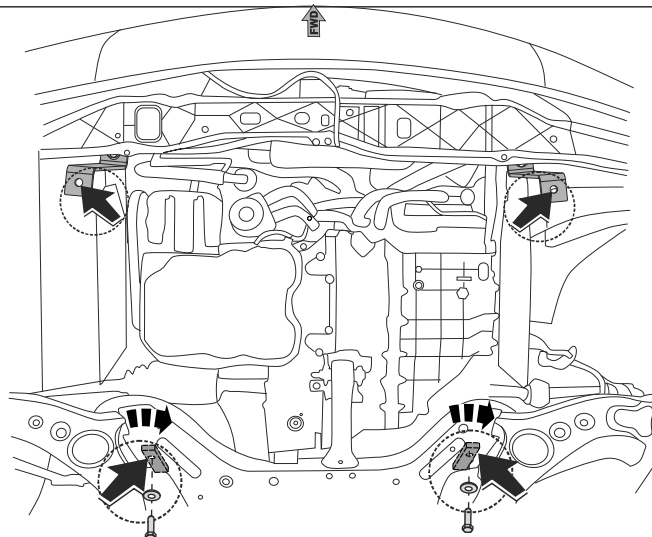



6

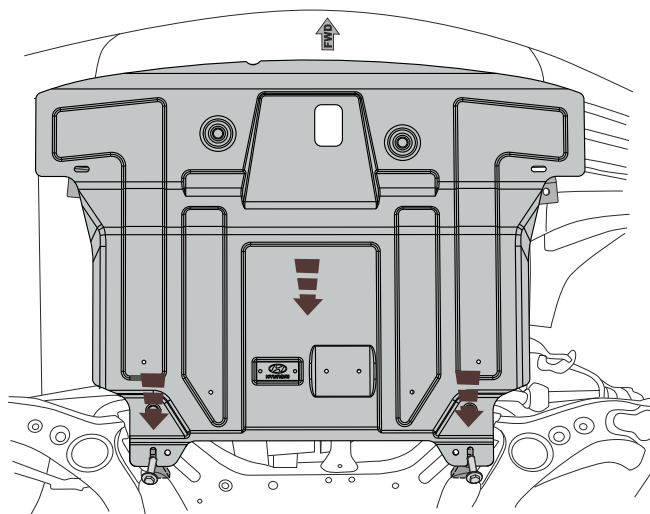

Part number:

10.2948

7

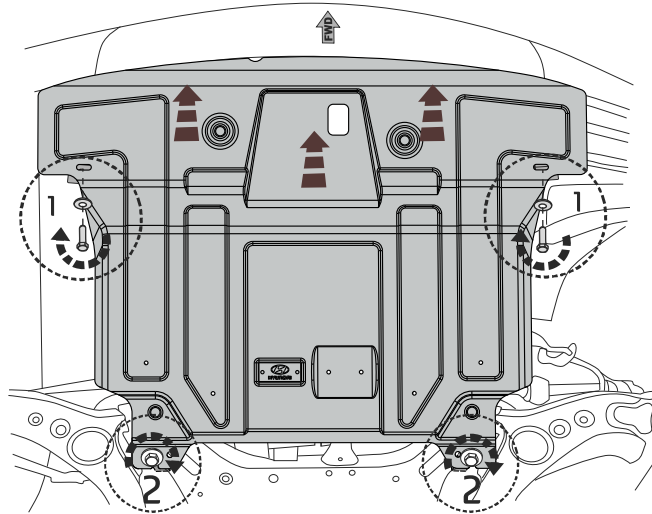

2xM10x20  
47 Nm 1

2xM8x20  
24 Nm 2

8

