


Mercedes Bens W 201

Body: Years.: 1988-1993 ; V: 1.8; 2.0; 2.3
VIN:- AT / MT Type: 13.008

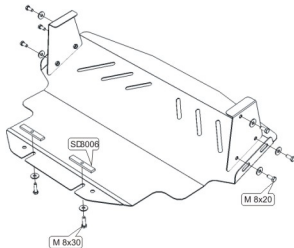

1. Disassemble the skid plate to component parts.
2. Insert straps into the front axle beam apertures. Screw bolts in already mounted straps
3. Fix lateral wings to regular apertures on the sides (ribs) of longerons.
4. Fix the skid plate to already mounted bolts in rear and to lateral wings in front
5. Tighten all screw joints.

