


Mercedes Benz Vito

Year:1999-;

Vol: 2,2;

VIN:-

TYPE :13.192

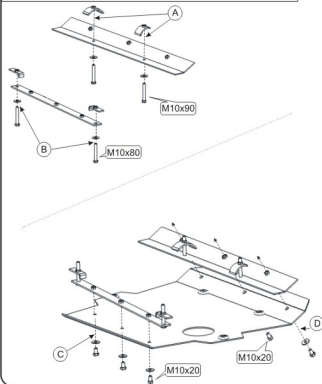

1. Disassemble the skid plate to component parts.
2. Fasten the front part of the skid plate to the cross-pipe of the car frame with M 10x90 bolts and straps (A).
3. Fasten the rear beam of the skid plate to the car frame through the apertures with M 10x80 bolts and straps (B).
4. Fix the main part of the skid plate to the already mounted parts with M 10x20 bolts (C), (D).
5. Tighten all screw joints.

