

Mercedes W202 E / W208 CLK

Body: W202


Year: 1993-1997;

V: all; CLK - 2.3

VIN:-

MT

TYPE :13.301

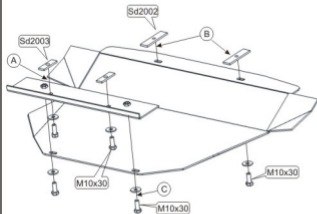

1. Disassemble the skid plate to component parts.
2. Fix the strap SD2003 to the front axle beam.
3. Fasten the beam of the skid plate to the already mounted strap with M 10x30 bolts (A).
4. Fix the main part of the skid plate to the already mounted beam with M 10x30 bolts (C); and to the radiator's beam with M 10x30 bolts and straps SD2002 (B).
5. Tighten all screw joints.

