


# Mercedes Sprinter 308D

Body:                      Years.: 1992-2002- ;                      V: all  
VIN:-WDB9036621R442100                      MT                      Type: 13.508

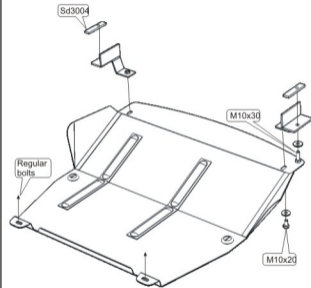

1. Disassemble the skid plate to component parts.
2. Insert straps Sd3004 into longerons' apertures.
3. Fix corbels to mounted straps with bolts M 10x30.
4. Fix the front part of the skid plate to component parts M 10x20.
5. Fix the rear part of the skid plate with regular bolts.
6. Tighten all screw joints.

