

# Mercedes Benz Vito 220CDI

Body: 220


Year.: 1996 -;

Vol: 2.2CDI

VIN:-

A.Gear

TYPE :13.695

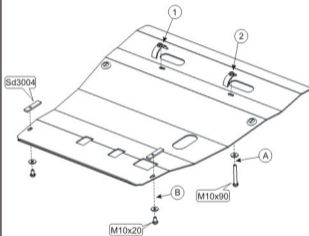

1. Disassemble the skid plate to component parts.
2. Fasten the skid plate to the cross-beam of the car using the M 10x90 bolts and straps "1" and "2".
3. Fasten the rear part to the car frame with M 10x20 bolts and straps SD3004.
4. Tighten all screw joints.

