

Mitsubishi Galant


Body: 202

Year: 2002 -;


Vol: 2.0; 2,5 V6;

VIN:-

TYPE :14.445

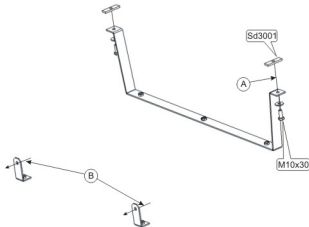

1. Disassemble the skid plate to component parts.
2. Fix the straps SD3001 to the apertures on the Longeron and fasten the skid plate's beam to them with M 10x30 bolts (A).
3. Fasten the towing lug to the front axle beam using the lever's fixation standard nuts.
4. Fasten the skid plate to the already mounted parts in front with M 10x20 bolts (D); in the rear with M 8x20 bolts (C).
5. Tighten all screw joints.

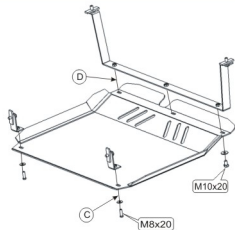

2 x M 8x20
3 x M 10x20
2 x M 10x30



2 x 8
5 x 10



2 x Towing lug



2 x 65x20x32 -SD3001