



# Nissan Pathfinder


Body: years.:1997-; V: 3,3;  
VIN:- JN8AR05U5W00000 AT TYPE :15.214



1. Disassemble the skid plate to component Parts.
2. Fix rear beam to steering arm fastener with bolts M 8x60 and nuts -(A).

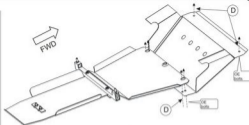

5. Fix the front part of the skid plate to OE fixing points -(D).
6. Tighten all screw joints.

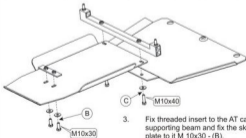

3. Fix threaded insert to the AT case supporting beam and fix the skid plate to it M 10x30 -(B).
4. In point "C" - Fix both parts of the skid plate to mounted beam with bolts M 10x40 -(C).

