


Nissan Almera

Year: 2000 -;

Vol: 1.6; 2.0

VIN:-

TYPE :15.225

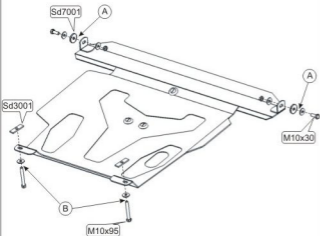

1. Disassemble the skid plate to component parts.
2. Fix the front part of the skid plate to the towing lug with M 10x30 bolts through special washers SD17001 (A).
3. Fasten the rear part of the skid plate through the apertures on the front axle beam using M 10x95 bolts and straps SD3001 (B).
4. Tighten all screw joints.



2 x M 10x30
2 x M 10x95



2 x SD7001
6 x 10



2 x Nuts M10



2 x 140x40x70 -SD3001