


# Nissan Maxima

Year:2000-;


Vol: 2.0; 3,0;

VIN:-

TYPE :15.242

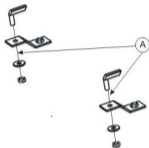

1. Fix the lug to the front axle beam using the special bolts (A).
2. Fasten the skid plate in front to the towing lug with M 10x30 bolts (B).
3. Fasten the rear part to the already mounted lug with M 10x20 bolts (C).
4. Tighten all screw joints.

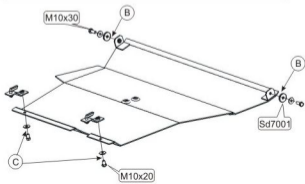

2 x Lug



2 x Special bolt



2 x M 10x20  
2 x M 10x30



2 x Special -Sd7001  
6 x 10