

Nissan Tino

Body: V10


Years.: 2001- ;

V: 2.0

VIN:-

AT

Type: 15.288

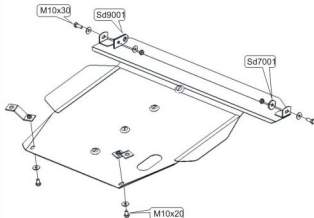

1. Disassemble the skid plate to component parts.
2. Fix corbels to suspension arms' fasteners with regular bolts.
3. Fix the rear part of the skid plate to mounted corbels with bolts M 10x20.
4. Fix the front part of the skid plate to towing lugs with bolts M 10x30.
5. Tighten all screw joints.

