


# Nissan Murano

Body: Years: 2003-; VIN: JN8AZ0BY93Y210000 4WD

V: 3.5;

15.0503

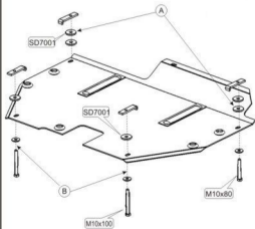

1. Disassemble the skid plate to component parts.
2. Fix straps over the car frame.
3. Fix the front part of the skid plate to mounted straps with bolts M 10x80 -(A).
4. Fix the rear part of the skid plate with bolts M 10x100-(B).
5. Tighten all screw joints.

