

Nissan Qashqai

Body:

ГYears.: 2006- ;


V: 1,6; 2,0

VIN:-

MT

Type: 15.1104

AL 15.1105

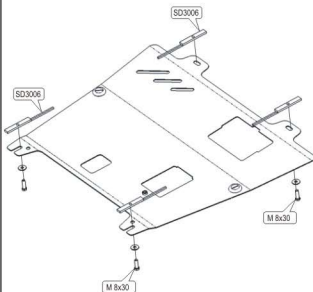

1. Remove OE duster.
2. Fix threaded inserts to the front and rear parts of the car frame.
3. Slightly screw bolts into the rear threaded inserts.
4. Put the rear part of the skid plate on mounted bolts, fix the front part of the skid plate to threaded inserts..
5. Tighten all screw joints.

