

# Opel Frontera

Body:


Years.: 1999- ;

V: 3.2

VIN:-

AT/MT

Type: 16.0352

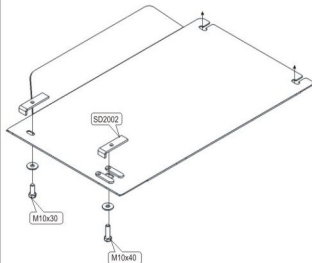

1. Mount this skid plate only after the skid plate for engine bay has already been installed.
2. Disassemble the skid plate to component parts.
3. Fix the skid plate to the skid plate for engine bay (in front) and to OE fixing points with threaded insert and bolts (in rear)
4. Tighten all screw joints.



2 x Threaded insert  
-SD2002

M 10x30  
M 10x40



2 x 10