


1. Disassemble the skid plate to the component parts.
2. Unscrew three bolts fastening bumper skirt.
3. Put element (1) on lower bumper edge and fix it with OE bolts together with bumper (A).
4. Additionally fix element (1) edge to OE apertures with bolts M 8x40 through bush- (B).



5. Fix special threaded insert to the rear car part.
6. Put the skid plate over element (1) and fix it with bolts M 8x20-(C)
7. Fix the rear part of the skid plate to the already mounted threaded insert with bolts M 8x20-(D).
8. Tighten all screw joints.

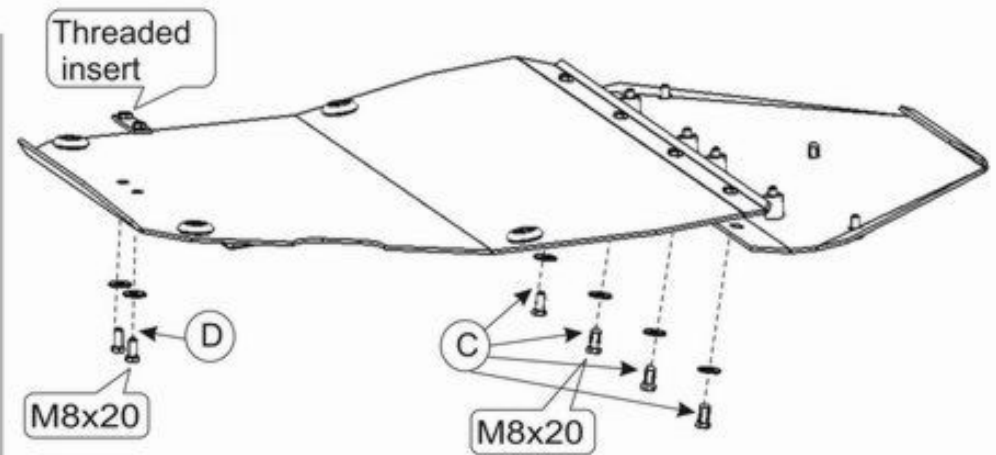