


# Peugeot 406

Year:1995-;


Vol: all;

VIN:-VF38B6FZF81244022

TYPE :17.217

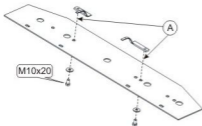

1. Disassemble the skid plate to component parts.
2. Fix special straps to the radiator beam.
3. Fix the front part of the skid plate to mounted straps with bolts M 10x20 (A).
4. Fix strap SD3004 to the front axle beam aperture.
5. Fix the skid plate's body over the installed front part with bolts M 8x20 (D).
6. Fix the rear part of the skid plate's body to the mounted strap SD3004 with bolt M 10x40 (B)
7. Fix lateral parts of the skid plate to the front axle beam with bolts M 10x30 and straps SD 3001 (C).
8. Tighten all screw joints.

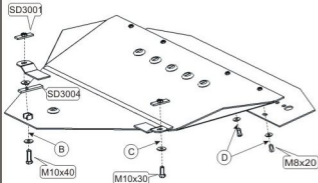

4 x M 8x20  
2 x M 10x20  
2 x M 10x30  
1 x M 10x40



4 x 8  
5 x 10



2 x Special straps



1 x 90x20x60 - SD3004  
2 x 65x20x32 - SD3001