


Peugeot 206

Year.: 1998 -;

Vol: all

VIN:-

TYPE :17.244

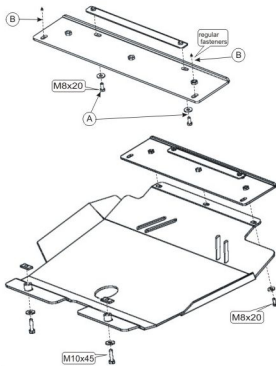

1. Disassemble the skid plate to component parts.
2. Fix the hold-down and skid plate's slat to the radiator beam with bolts M 8x20 so that radiator beam is between the hold down and the slat (A).
3. Fix the skid plate's slat to points 'B' with regular bolts.
4. Tighten bolts.
5. Fix special clips to the front axle beam apertures.
6. Fix the front part of the skid plate's body to the installed slat with bolts M 8x20.
7. Fix the rear part of the skid plate's body to mounted clips with bolts M 10x45 and bushes Φ 25x20.
8. Tighten all screw joints.

