


Peugeot 607

Year.:2001-;


V:2.0; 2.2; 2,9

VIN:-

TYPE :17.461

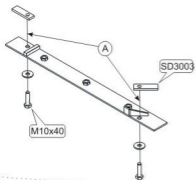

1. Disassemble the skid plate to component parts.
2. Fix the skid plate's beam to the rear part of the car frame with bolts M 10x40 and straps SD 3003 (A).
3. Fix straps over apertures in the front part of the car frame.
4. Fix the front part of the skid plate to mounted straps with bolts M 10x20 (B).
5. Fix the rear part of the skid plate to installed beam with bolts M 10x20 (C).
6. Tighten all screw joints.

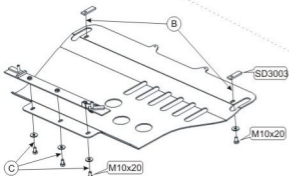

5 x M 10x20
2 x M 10x40



7 x 10



4 x 65x20x20 - SD3003